

# Manual



# Preface

Thank you for choosing PPC® Diagnostic System! PPC® Diagnostic System is a diagnostic tool for Volvo cars. This tool can both read and erase all diagnostic trouble codes and it handles all control units in the car. It can also reset the service indicator.

The tool is convenient and its functions are easy to learn. Just connect it to the diagnostic outlet of the car and make a diagnosis. We hope that PPC® Diagnostic System will be very useful for you!

Best regards  
BSR Svenska AB

# Contents

- 4      Introduction**
- 5      Product information**
- 6      Management**
- 8      Functions**
- 9      Handling diagram**
- 10     Home page**
- 10     Support**
- 11     Glossary**
- 12     Diagnostic Trouble Codes (DTC)**

# Introduction

## The manual

The manual is easy to read and it's illustrated. It contains all the information that's needed to be able to use PPC® Diagnostic System. Please, read the manual before operating the unit.

The manual describes:

- PPC® Diagnostic System and enclosed equipment
- how to connect PPC Diagnostic System to the car
- how to read DTCs
- how to erase DTCs
- how to reset the service indicator
- what all DTCs mean

## DTCs

The last part of the manual consists of DTCs and their definitions. A complete list with all definitions to all DTCs is available on the home page. On the home page it's also possible to search for a specific DTC or control unit.

(DTC= Diagnostic Trouble Code)

# Product information

## PPC® Diagnostic System

PPC® Diagnostic System can read and erase all DTCs from all control units in a Volvo car - not only the engine control unit (ECU) but all units. In all it handles nearly 40 different control units and more than 8000 diagnostic trouble codes. The DTCs are showed in PPC's display and you can find the definitions of the DTCs in this manual and on our home page <http://www.ppc-diagnostic.com>.

PPC® Diagnostic System can also reset the service indicator.

Works with all Volvo cars **from 2001 and forward** in the **40N/50/60/70/80/90 series**. Doesn't work with the old S40/V40 (1996-2004), old C70 (1998-2005) or new S80 (2007).

## Enclosed equipment

PPC® Diagnostic System always contains a PPC® unit and OBDII cable.



## Storage


PPC® Diagnostic System must not be exposed to water, moisture or condensation. Store it in a place free from dust and vibrations. Do not store it near strong magnetic fields.



# Management



## Enter and Menu

PPC® has got two buttons: Enter and Menu. With these two buttons you can easily navigate in the menu and choose the wanted function.

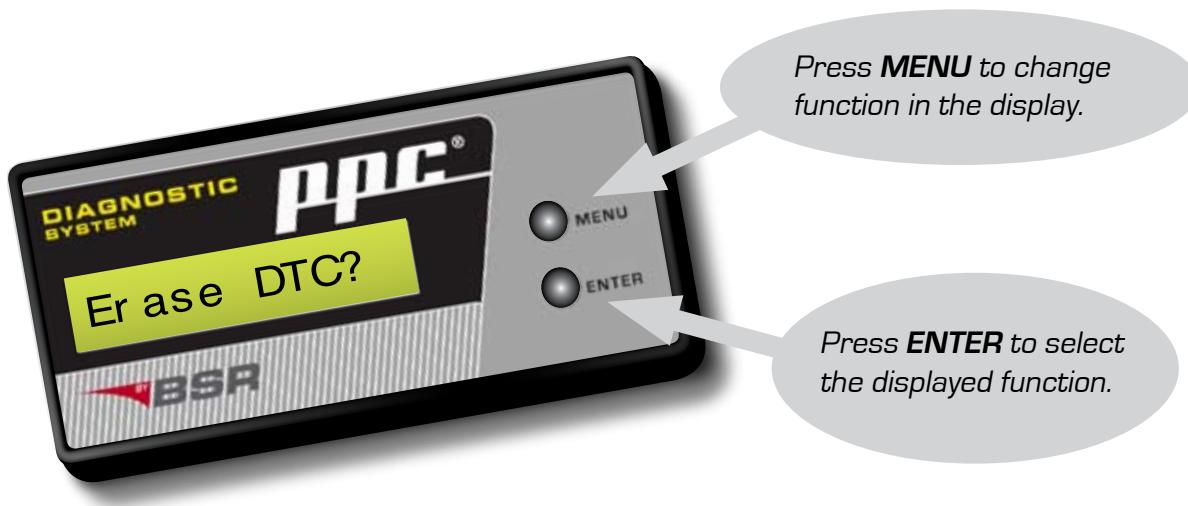

## Connection of the OBDII cable

1. Connect the OBDII cable to both PPC® and the car's diagnostic outlet.
2. Then turn ignition on.

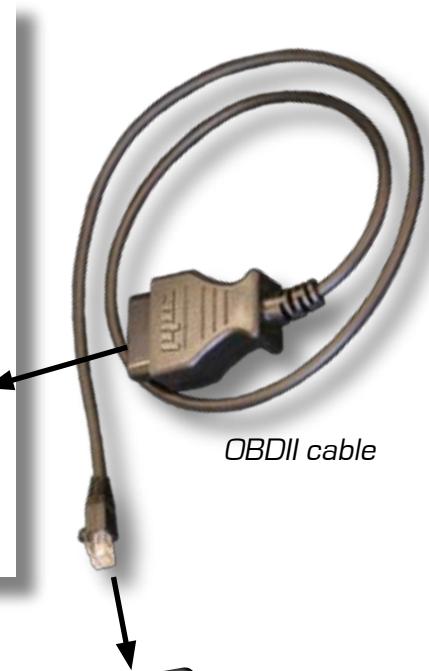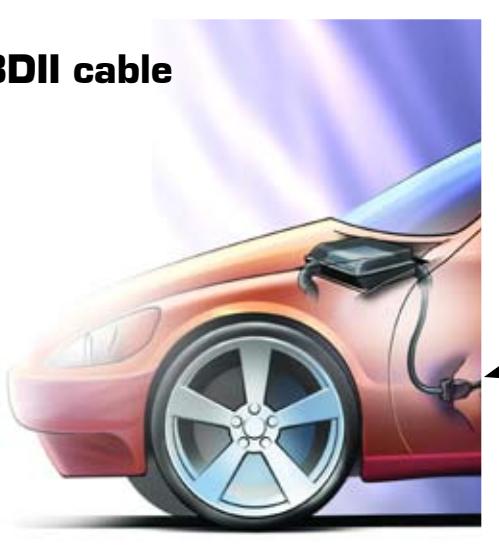

## **Location of the OBDII outlet**

The pictures below shows where the car's OBDII outlet (diagnostic outlet) is located on different Volvo models. To this outlet you connect the enclosed OBDII cable and PPC®.

Note that PPC® must not be connected to the car while driving. Disconnect PPC® from the car when you have finished the diagnosis.



Location of the OBDII outlet

# Functions

## Read DTC

- Connect PPC® Diagnostic System to the car and turn ignition on.
- When "Read DTC?" is showed, press Enter.
- Choose year model with the menu button [1999-2004 or 2005 and forw.], press Enter.

Now PPC® automatically starts searching through all control units of the car, one at a time. When a DTC is found it is showed in the display. Press Enter to continue the searching.

## Erase DTC

- Connect PPC® Diagnostic System to the car and turn ignition on.
- Browse to "Erase DTC?" with the menu button, then press Enter.
- Choose year model with the menu button [1999-2004 or 2005 and forw.], press Enter.
- The message "Erasing DTC..." shows that PPC® is erasing the DTCs of the car.

PPC® erases a limited amount of DTCs at a time. By large amounts of DTCs, it might be necessary to repeat the erasing procedure to get all DTCs erased.

## Reset SRL

- Connect PPC® Diagnostic System to the car and turn ignition on.
- Browse to "Reset SRL?" with the menu button, then press Enter.
- Choose year model with the menu button [1999-2004 or 2005 and forw.], press Enter.
- The message "SRL Reset..." shows that the service indicator is reset.

"SRL" means Service Reminder Lamp, also known as Service Reminder Indicator, SRI.

# Handling diagram

The diagram below shows how to read DTC, erase DTC and reset the service indicator. Handling is very easy: Menu button changes function in the display, and Enter button selects the wanted function.

**Enter** = press *Enter*

**Menu** = press *Menu*

## Read DTC

**Menu**

Read DTC?

**Enter**

Vol vo 99 to 04?

**Menu**

Vol vo 05 f or w. ?

**Enter**

*Different control units  
and DTCs are showed.*

## Erase DTC

**Menu**

Erase DTC?

**Enter**

Vol vo 99 to 04?

**Menu**

Vol vo 05 f or w. ?

**Enter**

Eras i ng DTC. . .

## Reset service indicator

Reset SRL?

**Enter**

Vol vo 99 to 04?

**Menu**

Vol vo 05 f or w. ?

**Enter**

SRL Reset . . .

# Home page

On our home page <http://www.ppc-diagnostic.com> you'll find information about PPC® Diagnostic System. Here are some examples of the contents on the home page:

## Search DTC

When you've found out what trouble codes the car has got, you also want to know what the codes mean. By using the search function you'll quickly get all the explanations to the different DTCs. It's possible to search on both DTCs and control units.

## FAQ

The FAQ (Frequently Asked Questions) contains the most common questions and answers. If you have a question you'll probably find the answer on the FAQ. The FAQ is continuously updated as we get new questions. A good tip is to have a look at the FAQ before you contact your PPC dealer.

## Order

You can order PPC® Diagnostic System via a simple order form on the home page.

## Manual

This manual is available also as pdf on the home page.

## Support

Where should I go to get support? If you have questions or need some help with the management of PPC® Diagnostic System you can contact your PPC dealer by completing a question form on the home page. Fill in your name and e-mail and write your question. Then press "Send". Your question is top priority and will be answered as soon as possible. The answer is sent to the e-mail that you entered.

Before contacting your PPC dealer by completing the question form on the home page we recommend that you first search for information in the FAQ on the home page.

### Important!



The PPC dealer will not answer questions concerning the car, car repair, (dis)assembly, spare parts, mechanics etc. If you have questions concerning this you are requested to apply for information at your branded garage or in a shop manual.

# Glossary

## Control units

<b>ABS</b>	Anti Block System
<b>ADM</b>	Additive Dosing Module
<b>AEM</b>	Accessory Electronic Module
<b>AFM</b>	AM FM Module
<b>ATM</b>	Antenna Module
<b>AUD</b>	Audio Module
<b>AUM</b>	Audio Module
<b>BCM</b>	Break Control Module
<b>CCM</b>	Climate Control Module
<b>CEM</b>	Central Electronic Module
<b>CPM</b>	Combustion Preheater Module
<b>DDM</b>	Driver Door Module
<b>DEM</b>	Differential Electronic Module
<b>DIM</b>	Driver Information Module
<b>ECM</b>	Engine Control Module
<b>EPS</b>	Electrical Power Steering Module
<b>GPS</b>	Global Positioning System Module
<b>ICM</b>	Infotainment Control Module
<b>KVM</b>	Keyless Vehicle Module
<b>MMM</b>	Multi Media Module
<b>MPM</b>	Mediaplayer
<b>MP1</b>	Media Player 1 (Minidisc)
<b>MP2</b>	Media Player 2 (CD)
<b>PAM</b>	Parking Assistance Module
<b>PDM</b>	Passenger Door Module
<b>PHM</b>	Phone Module
<b>PSM</b>	Power Seat Module
<b>REM</b>	Rear Electronic Module
<b>RTI</b>	Road Traffic Information
<b>SAS</b>	Steering Angle Sensor
<b>SRS</b>	Supplementary Restraint System
<b>SUB</b>	Subwoofer
<b>SUM</b>	Suspension Module
<b>SWM</b>	Steering Wheel Module
<b>TCM</b>	Transmission Control Module
<b>TMC</b>	Traffic Channel Module
<b>TRM</b>	Trailer Module
<b>UEM</b>	Upper Electronic Module

## Shortenings

<b>A/C</b>	Air Conditioning
<b>ACM</b>	Alternator Control Module
<b>AP</b>	Accelerator Pedal
<b>AQS</b>	Air Quality Sensor
<b>BSC</b>	Body Cluster Stability Sensor
<b>CAC</b>	Charge Air Cooler
<b>CMP</b>	Camshaft Position Sensor
<b>CP</b>	Canister Purge
<b>CPM</b>	Combustion Preheater Module
<b>DSTC</b>	Dynamic Stability Traction Control
<b>DTC</b>	Diagnostic Trouble Code
<b>ECT</b>	Engine Coolant Temperature
<b>EGR</b>	Exhaust Gas Recirculation
<b>ETM</b>	Electronic Throttle Module
<b>EVAP</b>	Evaporative Emission System
<b>FC</b>	Engine Cooling Fan
<b>FP</b>	Fuel Pump
<b>GDL</b>	Gas Discharge Lamp Module
<b>GSM</b>	Gear Selector Module
<b>HO2S</b>	Heated Oxygen Sensor
<b>IAT</b>	Intake Air Temperature
<b>KD</b>	Kick Down
<b>KS</b>	Knock Sensor
<b>LCM</b>	Left Camera Module
<b>LSM</b>	Light Switch Module
<b>MAF</b>	Mass Air Flow
<b>MAP</b>	Manifold Absolute Pressure
<b>MIL</b>	Malfunction Indicator Lamp
<b>OWS</b>	Occupant Weight Sensor
<b>RCM</b>	Right Camera Module
<b>RPM</b>	Engine Speed
<b>RSM</b>	Rain Sensor Module
<b>SCL</b>	Steering Column Lock Module
<b>SCM</b>	Siren Control Module
<b>SCU</b>	Start Control Module
<b>SRI</b>	Service Reminder Indicator
<b>SRL</b>	Service Reminder Lamp
<b>SIPS</b>	Side Impact Protection System
<b>TC</b>	Turbo Charger
<b>TWC</b>	Three-way Catalytic Converter
<b>VNT</b>	Variable Nozzle Turbo
<b>VSS</b>	Vehicle Speed Sensor
<b>WMM</b>	Wiper Motor Module

# Diagnostic Trouble Codes (DTC)

## Interpret DTCs

In the remaining part of the manual you'll find all DTCs from all control units in a Volvo car. However, you will not find all definition variants to each DTC. The manual only presents the all-embracing headline definition (marked red below). This is because of the limited space. A complete list with all definitions for all DTCs is available on the home page.

### → ECM-2820 Front HO2S, bank 1, heating

~~ECM-2820 Front heated oxygen sensor (HO2S), bank 1, heating. Signal missing~~

~~ECM-2820 Front heated oxygen sensor (HO2S), bank 1, heating. Signal too high~~

~~ECM-2820 Front heated oxygen sensor (HO2S), bank 1, heating. Signal too low~~

### → ECM-2820 HO2S bank 1, preheating

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Faulty signal. Intermittent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Faulty signal. Permanent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal missing. Intermittent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal missing. Permanent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal too high. Intermittent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal too high. Permanent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal too low. Intermittent fault~~

~~ECM-2820 Heated oxygen sensor (HO2S) bank 1, preheating. Signal too low. Permanent fault~~

### → ECM-2820 Fuel level too low

~~ECM-2820 Fuel level. Level too low~~

**Example that shows DTC "ECM-2820".**

Only the all-embracing headline (marked red above) is showed in this manual.

To get all explanations (crossed above) see our home page.

[www.ppc-diagnostic.com](http://www.ppc-diagnostic.com)

## **ABS**

ABS-0010 Left front wheel sensor  
ABS-0011 Left front wheel sensor  
ABS-0012 Left front wheel sensor  
ABS-0020 Right front wheel sensor  
ABS-0021 Right front wheel sensor  
ABS-0022 Right front wheel sensor  
ABS-0030 Left rear wheel sensor  
ABS-0031 Left rear wheel sensor  
ABS-0032 Left rear wheel sensor  
ABS-0040 Right rear wheel sensor  
ABS-0041 Right rear wheel sensor  
ABS-0042 Right rear wheel sensor  
ABS-0064 Stop lamp switch  
ABS-0065 Stop (brake) lamp switch  
ABS-0066 Front brake discs. Temp too high  
ABS-0070 Pump motor  
ABS-0072 Control module  
ABS-0074 Battery voltage  
ABS-0075 Control module  
ABS-0076 Control module  
ABS-0077 Battery voltage.  
ABS-0080 Control module.  
ABS-0090 Control module  
ABS-0091 Control module communication  
ABS-0092 Control module communication  
ABS-0093 Control module communication  
ABS-0094 Control module communication  
ABS-0095 Control module communication  
ABS-0097 Control module  
ABS-00A0 Yaw-velocity sensor 1  
ABS-00A1 Yaw rate sensor 1 & 2  
ABS-00A2 Side acceleration sensor.  
ABS-00A3 Lateral acceleration sensor  
ABS-00A3 Side acceleration sensor  
ABS-00A4 Brake pressure sensor 1  
ABS-00A5 Brake pressure sensor 2  
ABS-00A6 Brake pressure sensor 1 & 2  
ABS-00A7 Power supply sensor  
ABS-00B0 Brake amplifier pre-pressure valve  
ABS-00B0 Power brake booster pressure build-up valve  
ABS-00B1 Pedal pressure sensor  
ABS-00B2 Yaw-velocity sensor 2  
ABS-00B3 Communication SAS  
ABS-00B4 Communication SAS  
ABS-00B5 Communication SAS  
ABS-00B6 Communication. CAN or SAS  
ABS-00B7 Communication control unit  
ABS-00C0 Stabilising function  
ABS-00C1 Stabilising function  
ABS-00C2 Reversing signal  
ABS-00C3 Reversing signal  
ABS-00C4 Control unit  
ABS-00C7 DSTC Factory test

## **ADM**

ADM-0001 Additive dosing module (ADM)  
ADM-0002 Level sensor, additive  
ADM-0003 Level sensor, additive  
ADM-0004 Tank level, additive  
ADM-0005 Tank level, additive

ADM-0006 Pump, additive  
ADM-0007 Pump, additive  
ADM-0008 Pump, additive  
ADM-0009 Control module  
ADM-000A Vehicle speed  
ADM-000B Fuel level  
ADM-E000 Control module  
ADM-E003 Configuration fault  
ADM-E010 Power supply control module

## **AEM**

AEM-1A01 Power supply  
AEM-1D01 Control module  
AEM-1D02 Control module, software  
AEM-1D03 Control module not fully programmed  
AEM-1D07 Control module  
AEM-1D08 Control module  
AEM-1DOA Control module  
AEM-4F60 Back-up (reversing) warning system  
AEM-4F61 Back-up (reversing) warning system  
AEM-4F62 Reversing warning system, buzzer  
AEM-4F63 Reversing warning system, buzzer  
AEM-5F10 Relay, engine block heater  
AEM-5F11 Relay, engine block heater  
AEM-5F20 Remote start  
AEM-5F22 Remote start  
AEM-5F23 Remote start  
AEM-6C50 Alarm output P0  
AEM-6C51 Alarm output P0  
AEM-6C52 Alarm output P1  
AEM-6C53 Alarm output P1  
AEM-6C54 Alarm output S0  
AEM-6C55 Alarm output S0  
AEM-6C56 Alarm output S1  
AEM-6C57 Alarm output S1  
AEM-7A10 Carphone mute signal  
AEM-7A11 Carphone mute signal  
AEM-7A12 Rheostat signal  
AEM-7A14 Speed signal  
AEM-7A16 Antenna amplifier  
AEM-7A17 Antenna amplifier  
AEM-E001 Control module communication  
AEM-E003 Control module communication  
AEM-E010 Power supply

## **AFM**

AFM-0001 Antenna AM/FM  
AFM-0002 Antenna AM/FM  
AFM-0003 Antenna AM/FM

## **ATM**

ATM-0001 Antenna module (ATM)  
ATM-0002 TMC receiver  
ATM-0003 TMC receiver  
ATM-0004 GPS unit  
ATM-0005 GPS unit  
ATM-0006 GPS unit  
ATM-0007 GPS unit

## **AUD**

AUD-0001 Control module  
AUD-0002 Loudspeaker left front  
AUD-0003 Loudspeaker right front  
AUD-0004 Loudspeaker left rear  
AUD-0005 Loudspeaker right rear  
AUD-0006 Loudspeaker left front  
AUD-0007 Center loudspeaker  
AUD-0008 Loudspeaker right front  
AUD-0009 Loudspeaker left rear  
AUD-000A Loudspeaker right rear  
AUD-000B Loudspeakers front  
AUD-000C Loudspeaker rear  
AUD-000D Control module  
AUD-000E Microphone terminal  
AUD-000F Microphone terminal  
AUD-0010 Microphone terminal  
AUD-0011 Buttons headset 1  
AUD-0012 Buttons headset 1  
AUD-0013 Buttons headset 2  
AUD-0014 Buttons headset 2  
AUD-0015 Buttons headset 3  
AUD-0016 Buttons headset 3  
AUD-0017 Buttons headset 4  
AUD-0018 Buttons headset 4  
AUD-0019 Headset panel left  
AUD-001A Headset panel right

## **AUM**

AUM-1000 Memory control Audio HU1205  
AUM-2000 CD-servo Audio HU1205  
AUM-2100 CD unit Audio HU1205  
AUM-3000 GPS receiver Audio HU1205  
AUM-3100 GPS antenna Audio HU1205  
AUM-4001 Antenna amplifier 1  
AUM-4002 Amplifier, main antenna  
AUM-40FF Amplifier, main antenna  
AUM-41FF Amplifier, sub-antenna  
AUM-4201 Single CD player  
AUM-4203 Single CD player  
AUM-42F1 Single CD player  
AUM-42F3 Single CD player  
AUM-42FF Single CD player  
AUM-4301 MiniDisc player  
AUM-4303 MiniDisc player  
AUM-43F1 MiniDisc player  
AUM-43F3 MiniDisc player  
AUM-43FF MiniDisc player  
AUM-4401 4 disc CD changer  
AUM-4403 4 disc CD changer  
AUM-44F1 4 disc CD changer  
AUM-44F2 4 disc CD changer  
AUM-44F3 4 disc CD changer  
AUM-44FF 4 disc CD changer  
AUM-4501 Cassette deck  
AUM-45FF Cassette deck  
AUM-4601 10 disc CD changer  
AUM-4603 10 disc CD changer  
AUM-46F1 10 disc CD changer  
AUM-46F2 10 disc CD changer  
AUM-46F3 10 disc CD changer

## AUM-46FE 10 disc CD changer

AUM-46FF 10 disc CD changer  
AUM-47FE Amplifier  
AUM-47FF Amplifier  
AUM-48FD Control module  
AUM-49FD Control module  
AUM-4BFF Control module  
AUM-6000 Audio unit Audio HU1205  
AUM-E001 Communication control module  
AUM-E003 Communication control module

## **BCM**

BCM-0010 Left front wheel sensor  
BCM-0011 Left front wheel sensor  
BCM-0012 Left front wheel sensor  
BCM-0020 Right front wheel sensor  
BCM-0021 Right front wheel sensor  
BCM-0022 Right front wheel sensor  
BCM-0030 Left rear wheel sensor  
BCM-0031 Left rear wheel sensor  
BCM-0032 Left rear wheel sensor  
BCM-0040 Right rear wheel sensor  
BCM-0041 Right rear wheel sensor  
BCM-0042 Right rear wheel sensor  
BCM-0050 Control module  
BCM-0052 Control module  
BCM-0057 Power supply  
BCM-0058 Power supply  
BCM-0061 Brake discs  
BCM-0065 Stop lamp switch/pedal position sensor  
BCM-0068 Sensor power supply  
BCM-0070 Power supply for the pump motor  
BCM-0071 Pump motor  
BCM-0072 Pump motor  
BCM-0074 Hydraulic valves  
BCM-0076 Control module  
BCM-0080 Lateral accelerometer  
BCM-0081 Accelerometer  
BCM-0082 Yaw rate sensor  
BCM-0083 Angle of lean sensor  
BCM-0090 Lateral accelerometer  
BCM-0091 Accelerometer  
BCM-0092 Yaw rate sensor  
BCM-0093 Angle of lean sensor  
BCM-0094 Communication control modules  
BCM-0095 Communication control modules  
BCM-0097 Communication control modules  
BCM-0100 Communication control modules  
BCM-0101 Communication control modules  
BCM-0103 Pedal position sensor  
BCM-0105 Steering wheel, wheel alignment  
BCM-0106 Steering wheel, wheel alignment  
BCM-0108 Communication control modules  
BCM-0108 Communication control modules  
BCM-0109 Communication control modules  
BCM-0111 Communication control modules  
BCM-0112 Active yaw control sensor  
BCM-0112 Body sensor cluster stability sensor  
BCM-0113 Back-up (reversing) signal  
BCM-0114 Communication active yaw control  
BCM-0114 Communication with BSC

BCM-0115	Communication control modules
BCM-0116	Communication active yaw control
BCM-0116	Communication BSC
BCM-0117	Communication active yaw control
BCM-0117	Communication BSC
BCM-0118	Power supply for active yaw control
BCM-0118	Power supply for BSC
BCM-0119	Power supply for active yaw control
BCM-0119	Power supply for BSC
BCM-0121	Yaw rate sensor
BCM-0123	Active yaw control sensor
BCM-0123	BSC
BCM-0125	Lateral accelerometer
BCM-0127	Angle of lean sensor
BCM-0129	Accelerometer
BCM-0130	Brake pressure sensor 1
BCM-0131	Brake pressure sensor
BCM-0132	Brake pressure sensor
BCM-0133	Brake pressure sensor 2
BCM-0134	Brake pressure sensor
BCM-0135	Brake pressure sensor
BCM-0136	Brake pressure sensor 1 and 2
BCM-0138	Power supply for active yaw control
BCM-0138	Power supply for BSC
BCM-0139	Pressure build-up valve, power brake booster
BCM-0140	Pedal pressure sensor
BCM-0145	Stability control
BCM-0146	Factory test DSTC
BCM-0147	Pedal position sensor
BCM-0148	Communication control modules
BCM-0150	Stop lamp switch
BCM-0151	Control module
BCM-A030	Communication control modules
BCM-A031	Communication control modules
BCM-A032	Communication control modules
BCM-E000	Control module communication
BCM-E003	Configuration fault
CCM-0009	Sun sensor
CCM-000A	Air distribution damper motor position sensor
CCM-000A	Nightfall sensor
CCM-000B	Air distribution damper motor position sensor
CCM-000B	Left temperature damper motor
CCM-000C	Right temperature damper motor
CCM-000D	Recirculation damper motor
CCM-000E	Damper motor, floor / ventilation
CCM-000F	Damper motor defroster
CCM-0010	Air distribution damper motor
CCM-0010	Control module
CCM-0011	Control module
CCM-0011	Left temperature damper motor
CCM-0012	Right temperature damper motor
CCM-0012	Temperature damper motor
CCM-0013	Air distribution damper motor
CCM-0013	Recirculation damper motor
CCM-0014	Damper motor, floor and ventilation
CCM-0015	Damper motor defroster
CCM-0016	Air distribution damper motor
CCM-0017	Damper motor direction control
CCM-0017	Direction regulator damper motor
CCM-0018	Damper motor direction control
CCM-0018	Direction regulator damper motor
CCM-0019	Function button
CCM-001A	Blower fan knob
CCM-001B	Blower fan motor
CCM-001B	Lower switch
CCM-001C	Lower switch
CCM-001D	Left temperature knob
CCM-001E	Right Temperature knob
CCM-001F	Air quality sensor
CCM-001F	Blower fan motor
CCM-0020	Air quality sensor
CCM-0020	Blower fan power unit
CCM-0020	Function button
CCM-0021	Air quality sensor
CCM-0021	Blower fan power unit
CCM-0022	Air quality sensor
CCM-0030	Left heater pad
CCM-0031	Sensor left-hand seat heater
CCM-0032	Left-hand seat heater
CCM-0033	Left-hand seat heater
CCM-0034	Right heater pad
CCM-0035	Sensor right-hand seat heater
CCM-0036	Right-hand seat heater
CCM-0037	Right-hand seat heater
CCM-0040	Air quality sensor
CCM-0045	Blower fan relay
CCM-0046	Blower fan relay
CCM-0050	Blower fan knob
CCM-0051	Temperature control left
CCM-0052	Left-hand seat heater
CCM-0052	Temperature control right
CCM-0053	Air distribution control
CCM-0053	Right-hand seat heater
CCM-0056	Communication left-hand seat heater
CCM-0057	Communication right-hand seat heater
CCM-0058	Communication left-hand seat heater
CCM-0059	Communication right-hand seat heater
CCM-0060	Damper motor defroster

## CCM

CCM-0001	Blower fan motor
CCM-0001	Configuration fault
CCM-0002	Blower fan motor
CCM-0002	Evaporator temperature sensor
CCM-0003	Blower fan motor passenger compartment temperature sensor
CCM-0003	Evaporator temperature sensor
CCM-0004	Compressor
CCM-0004	Passenger compartment temp sensor
CCM-0005	Evaporator temperature sensor
CCM-0005	Passenger compartment temp sensor
CCM-0006	Blower fan motor passenger compartment temperature sensor
CCM-0006	Evaporator temperature sensor
CCM-0006	Temp damper motor position sensor
CCM-0007	Passenger compartment temp sensor
CCM-0007	Temp damper motor position sensor
CCM-0008	Blower fan motor passenger compartment temperature sensor
CCM-0008	Sun sensor
CCM-0009	Blower fan motor passenger compartment temperature sensor

CCM-0061 Rear demist, heated door mirrors	CEM 000B Switch, front fog lamps
CCM-0061 Recirculation damper motor	CEM 000C Switch, rear fog lamps
CCM-0062 Left temperature damper motor	CEM 000D Rheostat, input
CCM-0062 Rear demist, heated door mirrors	CEM 000E Speed signal
CCM-0063 Request AC, ECC, MCC	CEM 000F High beam
CCM-0063 Right temperature damper motor	CEM 0010 High beam
CCM-0064 Air distribution damper motor	CEM 001E Rheostat, output
CCM-0064 Request AC, ECC, MCC	CEM 0021 Control module, internal fault
CCM-0065 Temp/recirculation damper motor	CEM 0022 Windshield wiper, parking position switch
CCM-0067 Recirculation damper motor	CEM 0023 Windshield wiper, parking position switch
CCM-0068 Recirculation damper motor	CEM 0024 Control module, internal fault
CCM-0070 Configuration fault	CEM 0025 Bulb failure warning sensor
CCM-0071 Damper motor	CEM 0026 Bulb failure warning sensor
CCM-0071 Temp/air distribution damper motor	CEM 0027 Battery voltage
CCM-0072 Damper motor	CEM 1A03 S-Power supply
CCM-0073 Air distribution damper motor	CEM 1A05 X-Power supply
CCM-0079 ECT sensor, ECC	CEM 8C12 Switch, rear fog lamps
CCM-007A ECT sensor, ECC	CEM 8D02 Ignition switch lighting and high-mounted stop lamp (LED)
CCM-007C Evaporator temp sensor, ECC, MCC	CEM-1010 Control module memory fault
CCM-007D Evaporator temp sensor, ECC, MCC	CEM-1011 (A) Control module memory fault
CCM-007E Outside temperature sensor ECC	CEM-1011 (B) Control module memory fault
CCM-007F Outside temperature sensor, ECC	CEM-1012 (A) Control module memory fault
CCM-0080 Air distribution damper motor	CEM-1012 (B) Control module memory fault
CCM-0081 Temperature damper motor	CEM-1A03 S-Power supply
CCM-0085 30-power supply	CEM-1A04 X-Power supply
CCM-0086 Left-hand seat heater switch	CEM-1A05 30 Power supply
CCM-0087 AC switch, ECC, MCC	CEM-1A05 X-Power supply
CCM-0088 REC switch	CEM-1A06 15-Power supply
CCM-0089 Rear defroster switch	CEM-1A07 15-Power supply
CCM-008A Right-hand seat heater switch	CEM-1A08 50-Power supply
CCM-008B Climate control module ECC	CEM-1A09 50-Power supply
CCM-0090 Lower switch	CEM-1A21 Engine control module (ECM)
CCM-0091 Lower switch	CEM-1A21 Increased power supply relay
CCM-00A0 Blower fan motor	CEM-1A22 Engine control module (ECM)
CCM-00A1 Blower fan motor	CEM-1A23 Increased power supply relay
CCM-DD00 LIN bus 1	CEM-1A24 Relay Ext X2-Power supply
CCM-DD01 LIN bus 1	CEM-1A25 Relay Ext X2-Power supply
CCM-DD02 LIN bus 1	CEM-1A26 Relay, 15i power supply
CCM-DD10 Air quality sensor (AQS)	CEM-1A27 Relay, 15i power supply
CCM-DD12 Left seat heater	CEM-1A40 50-power supply
CCM-DD14 Recirculation damper motor	CEM-1A41 (A) Ignition switch
CCM-DD15 Left temperature damper motor	CEM-1A41 (B) Real time clock
CCM-DD16 Damper motor air distribution	CEM-1A42 Real time clock
CCM-DD20 LIN bus 2	CEM-1A51 Communication with SRS
CCM-DD21 LIN bus 2	CEM-1A52 Communication with DDM
CCM-DD30 Right-hand seat heater	CEM-1A53 Communication with PDM
CCM-DD31 Recirculation damper motor	CEM-1A54 Communication with PSM
CCM-DD32 Right temperature damper motor	CEM-1A55 Communication with CCM
CCM-DD33 Damper motor defroster	CEM-1A56 Communication with DIM
CCM-DD34 Air quality sensor (AQS)	CEM-1A57 Communication with RTI
CCM-E001 Control module communication	CEM-1A58 Communication with PHM
CCM-E003 Configuration fault	CEM-1A59 Communication with AUM
CCM-E010 Power supply	CEM-1A5A Communication with REM
	CEM-1A5B Communication with SVM
	CEM-1A5C Communication with UEM
	CEM-1A5D Communication with ETM
	CEM-1A5E Communication with SAS
	CEM-1A5F Communication with ABS
	CEM-1A5F Communication with BCM
	CEM-1A61 Communication with TCM

## CEM

CEM 0001 Control module  
 CEM 0002 High beam flash  
 CEM 0003 Lighting switch  
 CEM 0009 15/2-Power supply  
 CEM 000A 75-Power supply

CEM-1A62 Communication with ECM	CEM-3F01 (B) Back up gear inhibitor
CEM-1A63 Communication with AEM	CEM-3F02 (A) Clutch pedal sensor
CEM-1A64 Communication with DEM	CEM-3F02 (B) Back up gear inhibitor
CEM-1A65 Communication with SUM	CEM-3F02 Shift lock signal
CEM-1A66 Communication with ICM	CEM-3F03 Clutch pedal sensor
CEM-1C01 L signal	CEM-3F03 Shift lock signal
CEM-1C02 L signal	CEM-3F81 Immobilizer signal
CEM-1C04 30 Power supply	CEM-3F82 Immobilizer signal
CEM-1C05 30-Power supply	CEM-3F83 Immobilizer signal
CEM-1C06 Alternator control module (ACM)	CEM-3F84 Immobilizer signal
CEM-1C07 Alternator control module (ACM)	CEM-3F90 Fuel pump relay
CEM-1C08 Alternator control module (ACM)	CEM-3F91 Fuel pump relay
CEM-1COA Alternator control module (ACM)	CEM-3F92 Accelerator pedal (AP) position sensor
CEM-1C21 Relay, infotainment	CEM-3F93 Accelerator pedal (AP) position sensor
CEM-1C22 Relay, infotainment	CEM-4A00 Total mileage
CEM-1D01 Control module memory fault	CEM-4A31 Ejector senso
CEM-1D01 Control module. Internal fault	CEM-4A33 Fuel level sensor
CEM-1D02 Control module. Internal fault	CEM-4A34 Fuel level sensor
CEM-1D03 Control module not fully programmed	CEM-4A35 Fuel level sensor
CEM-1D04 ECM, software	CEM-4A37 Fuel level sensor
CEM-1D05 Control module	CEM-4A38 Fuel level sensor
CEM-1D05 TCM, software	CEM-4C01 Outside temperature sensor
CEM-1D06 Control module	CEM-4C02 Outside temperature sensor
CEM-1D07 Control module	CEM-4E24 Malfunction indicator lamp (MIL)
CEM-1D08 Control module	CEM-4E25 Malfunction indicator lamp (MIL)
CEM-1D09 Control module	CEM-4FO0 Reset button
CEM-1DOA Control module	CEM-4FO1 Read button
CEM-1DOB Control module	CEM-4F30 Battery temperature
CEM-1DOC Control module	CEM-4F31 Battery temperature
CEM-1E04 Communication with lamp switch module	CEM-4F32 Battery temperature
CEM-1E05 Communication with additional heater module	CEM-4F40 Seat belt buckle, right rear seat
CEM-1FO0 ECM, software	CEM-4F41 Light emitting diode, left camera module
CEM-1FO1 TCM, software	CEM-4F41 Seat belt buckle, right rear seat
CEM-2E01 Power steering	CEM-4F42 Light emitting diode, right camera module
CEM-2E03 Power steering	CEM-4F42 Seat belt buckle, rear right-hand
CEM-2E04 Power steering	CEM-4F43 Light emitting diode, left camera module
CEM-2F01 Seat position sensor, driver	CEM-4F44 Light emitting diode, right camera module
CEM-2F02 Seat position sensor, driver	CEM-4F44 Seat belt buckle, rear center
CEM-2F03 Seat position sensor, driver	CEM-4F45 Light emitting diode, left camera module
CEM-2F04 Seat position sensor, passenger	CEM-4F45 Seat belt buckle, rear center
CEM-2F05 Seat position sensor, passenger	CEM-4F46 Light emitting diode, right camera module
CEM-2F06 Seat position sensor, passenger	CEM-4F46 Seat belt buckle, rear center
CEM-2F60 Twilight sensor	CEM-4F47 Left camera module
CEM-2F61 Twilight sensor	CEM-4F48 Right camera module (RCM)
CEM-2FA1 Driver seatbelt lock	CEM-4F48 Seat belt buckle, rear left-hand
CEM-2FA2 Driver seatbelt lock	CEM-4F49 Seat belt buckle, rear left-hand
CEM-2FA3 Driver seatbelt lock	CEM-4F4A Seat belt buckle, rear left-hand
CEM-2FA4 Passenger seatbelt lock	CEM-4F81 Lamp, seat belt reminder
CEM-2FA5 Passenger seatbelt lock	CEM-4F82 Lamp, seat belt reminder
CEM-2FA6 Passenger seatbelt lock	CEM-4F90 Seat belt reminder
CEM-3AO0 ECM software	CEM-4F91 Seat belt reminder
CEM-3AO1 Fuel pump	CEM-4F92 Seat belt reminder
CEM-3AO2 Fuel pump	CEM-4F93 Seat belt reminder
CEM-3AO3 Fuel pump	CEM-5A00 Sun sensor
CEM-3AO4 Fuel pump (FP)	CEM-5A01 Sun sensor
CEM-3AO5 Fuel pump (FP)	CEM-5A10 Blower fan motor
CEM-3AO7 Fuel pump (FP)	CEM-5A12 Blower fan motor
CEM-3AO7 Relay, leak diagnostic pump heating	CEM-5A13 Blower fan motor
CEM-3AO8 Fuel pump (FP)	CEM-5A15 Blower fan motor
CEM-3AO8 Relay, leak diagnostic pump heating	CEM-5A60 PTC heater
CEM-3F01 (A) Clutch pedal sensor	CEM-5A61 PTC heater

CEM-5B01 LH heating element	CEM-6C41 Antenna/light ring wire clock-signal (ICK)
CEM-5B02 RH heating element	CEM-6C41 Antenna/light ring-clock signal cable
CEM-5B05 Left seat heater	CEM-6C41 Start control module (SCU)
CEM-5B06 Right seat heater	CEM-6C42 Antenna / light ring - clock signal cable
CEM-5B07 Left seat heater	CEM-6C42 Antenna/light ring wire clock-signal (ICK)
CEM-5B08 Right seat heater	CEM-6C42 Start control module (SCU)
CEM-5B09 Communication seat heater module	CEM-6C43 Antenna / light ring - data communication cable
CEM-5B10 Communication seat heater module	CEM-6C43 Antenna/light ring wire data communication (IDS)
CEM-5E01 Sun sensor	CEM-6C43 Start control module (SCU)
CEM-5E02 Sun sensor	CEM-6C44 Antenna / light ring - data communication cable
CEM-5F11 Relay, auxiliary heater	CEM-6C44 Antenna/light ring wire data communication (IDS)
CEM-5F13 Relay, auxiliary heater	CEM-6C44 Steering column lock module (SCL)
CEM-5F31 Engine coolant temperature sensor	CEM-6C45 Steering column lock module (SCL)
CEM-5F32 Engine coolant temperature sensor	CEM-6C45 Antenna/light ring
CEM-5F36 Flame indicator	CEM-6C46 Antenna / light ring
CEM-5F36 Flame sensor	CEM-6C46 Steering column lock module (SCL)
CEM-5F37 Factory set DTC	CEM-6C47 Steering column lock module (SCL)
CEM-5F39 Flame indicator	CEM-6C48 Transponder type
CEM-5F39 Flame sensor	CEM-6C49 Steering column lock module (SCL)
CEM-5F3A Water pump	CEM-6C49 Transponder communication
CEM-5F3B Water pump	CEM-6C50 Steering column lock module (SCL)
CEM-5F3C Combustion fan	CEM-6C51 Steering column lock module (SCL)
CEM-5F3D Combustion fan	CEM-6C52 Steering column lock module (SCL)
CEM-5F3E Combustion fan	CEM-6C53 Steering column lock module (SCL)
CEM-5F3F Fuel pump	CEM-6C54 ECM communication
CEM-5F40 Fuel pump	CEM-6C56 Steering column lock module (SCL)
CEM-5F41 Overheat thermostat	CEM-6D01 Relay, window lift LR up
CEM-5F42 Power supply	CEM-6D03 Relay, window lift LR up
CEM-5F43 Power supply	CEM-6D04 Relay, window lift LR down
CEM-5F46 Glow plugs	CEM-6D06 Relay, window lift LR down
CEM-5F47 Control module power supply	CEM-6D07 Relay, window lift RR up
CEM-5F4C Power supply	CEM-6D09 Relay, window lift RR up
CEM-5F4C Undervoltage	CEM-6DOA Relay, window lift RR down
CEM-5F4D OBD system	CEM-6DOC Relay, window lift RR down
CEM-5F4F Start attempt	CEM-6DOD Relay, child safety blocking
CEM-5F50 Overheat thermostat	CEM-6DOF Relay, child safety blocking
CEM-6A01 Rear left door unlocked	CEM-6E01 Switch, fuel tank filler cover
CEM-6A02 Rear right door unlocked	CEM-6F01 Cruise control ON/OFF button
CEM-6A03 Rear left door locked	CEM-6F02 Cruise control Set+ button
CEM-6A04 Rear right door locked	CEM-6F03 Cruise control Set- button
CEM-6C05 Central locking driver's door	CEM-6F04 Cruise control, Resume button
CEM-6C06 Central locking passenger door	CEM-6F05 Cruise control, Cancel button
CEM-6C07 Central locking left-hand rear door	CEM-6F06 Cruise control
CEM-6C08 Central locking right-hand rear door	CEM-6F07 Cruise control
CEM-6C11 Glass breakage loop, rear windows	CEM-6F10 Sun roof
CEM-6C12 Glass breakage loop, rear windows	CEM-6F11 Sun roof
CEM-6C13 Deadlock, driver's door	CEM-6F12 Sun roof
CEM-6C14 Deadlock, passenger door	CEM-6F13 Sun roof
CEM-6C15 Deadlock, left-hand rear door	CEM-6F51 Tailgate handle
CEM-6C16 Deadlock, right-hand rear door	CEM-6F52 Tailgate handle
CEM-6C17 Glass breakage loop	CEM-6F53 Tailgate handle
CEM-6C18 Glass breakage loop	CEM-6F71 Switch, fuel tank filler cover
CEM-6C19 Child-proof lock, left-hand rear door	CEM-6F83 Dimmer
CEM-6C20 Child-proof lock, right-hand rear door	CEM-6F85 Dimmer
CEM-6C28 Alarm LED	CEM-6F86 Fuel tank filler cap
CEM-6C29 Alarm LED	CEM-6F87 Fuel tank filler cap
CEM-6C30 Siren	CEM-7A01 Scan- button
CEM-6C31 Siren	
CEM-6C32 Movement sensor	
CEM-6C33 Movement sensor	
CEM-6C34 Switch reduced alarm	

CEM-7A02 Scan+ button	CEM-8C10 Relay, front fog lamps
CEM-7A03 Scan- button	CEM-8C11 Front fog lamp switch
CEM-7A04 Volume+ button	CEM-8C11 Relay, front fog lamps
CEM-7A05 Phone YES button	CEM-8C11 Switch, front fog lamps
CEM-7A06 Phone NO button	CEM-8C12 Rear fog lamp switch
CEM-7A07 RTI Right button	CEM-8C13 Front fog lamp relay
CEM-7A08 RTI Left button	CEM-8C15 Front fog lamp relay
CEM-7A09 RTI Down button	CEM-8C20 Rear fog lamp
CEM-7A0A RTI Up button	CEM-8C21 Rear fog lamp
CEM-7A0B RTI Back button	CEM-8D01 Ignition lock light and extra brake light
CEM-7A0C RTI Enter button	CEM-8D01 Ignition switch lighting and high-mounted stop lamp (LED)
CEM-8A01 Invalid switch position for light switch	CEM-8D01 Stop lamp switch
CEM-8A02 Main beam relay	CEM-8D01 Stop lamps
CEM-8A02 Relay, high beam	CEM-8D02 Stop lamps
CEM-8A03 Relay, high beam	CEM-8D03 High level stop lamp
CEM-8A04 Main beam relay	CEM-8D04 High level stop lamp
CEM-8A05 Dipped headlamp relay	CEM-8D05 Right-hand stop lamp
CEM-8A07 Dipped headlamp relay	CEM-8D06 Right-hand stop lamp
CEM-8A08 Extra lamp relay	CEM-8D07 Left-hand stop lamp
CEM-8A08 Low beam right	CEM-8D08 Left-hand stop lamp
CEM-8A09 Low beam right	CEM-8E01 Back-up (reversing) lamp switch
CEM-8A0A Extra lamp relay	CEM-8E01 Reversing light
CEM-8A0B Relay, daytime running lamp	CEM-8F01 Switch, hazard warning signal flashers
CEM-8A0C Relay, daytime running lamp	CEM-8F01 Warning flasher and glovebox light
CEM-8A11 Low beam left	CEM-8F02 Left direction indicator
CEM-8A12 Low beam left	CEM-8F02 Switch, hazard warning signal flashers
CEM-8A20 GDL left-hand	CEM-8F02 Left-hand turn signal lamp
CEM-8A20 Low beam left	CEM-8F03 Right direction indicator
CEM-8A21 GDL left-hand	CEM-8F03 Right-hand turn signal lamp
CEM-8A21 Low beam right	CEM-8F04 Turn signal lamp
CEM-8A22 GDL left-hand	CEM-8F05 Switch, hazard warning signal flashers
CEM-8A23 GDL right-hand	CEM-8F06 Switch, hazard warning signal flashers
CEM-8A24 GDL left-hand	CEM-8F07 Switch, hazard warning signal flashers
CEM-8A25 GDL right-hand	CEM-8F08 Engine control module (ECM)
CEM-8A26 GDL left-hand	CEM-8F09 Engine control module (ECM)
CEM-8A27 GDL right-hand	CEM-8F11 CEM Headlamp beam height control
CEM-8A28 GDL left-hand	CEM-8F11 Light width control
CEM-8A29 GDL right-hand	CEM-8F12 Beam setting control
CEM-8A30 Daytime running lamps, left	CEM-8F12 CEM Headlamp beam height control
CEM-8A30 GDL left-hand	CEM-8F13 LSM Headlamp beam height control
CEM-8A31 Daytime running lamps, right	CEM-8F13 Light width control
CEM-8A31 GDL left-hand	CEM-8F14 LSM Headlamp beam height control
CEM-8A32 GDL right-hand	CEM-8F14 Light width control
CEM-8A32 High beam flash	CEM-8F15 Xenon lamp left
CEM-8A33 GDL left-hand	CEM-8F16 Xenon lamp left
CEM-8A34 GDL right-hand	CEM-8F17 Xenon lamp left
CEM-8A35 GDL left-hand	CEM-8F18 Xenon lamp left
CEM-8A36 GDL right-hand	CEM-8F19 Xenon lamp right
CEM-8A37 GDL left-hand	CEM-8F1A Xenon lamp right
CEM-8A38 GDL right-hand	CEM-8F1B Xenon lamp right
CEM-8A39 GDL left-hand	CEM-8F1C Xenon lamp right
CEM-8A40 GDL left-hand	CEM-8F1D X-supply relay circuit
CEM-8B01 Parking lamps	CEM-8F21 Windshield wiper
CEM-8B01 Position lamp relay	CEM-8F21 Wiper motor module (WMM)
CEM-8B02 Left parking lamps	CEM-8F21 Wipers
CEM-8B03 Left parking lamps	CEM-8F22 Windshield wiper
CEM-8B03 Position lamp relay	CEM-8F22 Wiper motor module (WMM)
CEM-8B05 Right parking lamps	CEM-8F22 Wipers
CEM-8B06 Right parking lamps	CEM-8F23 Relay, windshield wiper
CEM-8B08 Light switch module (LSM)	CEM-8F23 Wiper motor module (WMM)
CEM-8B09 Light switch module (LSM)	

CEM-8F24 Wiper motor module (WMM)	CEM-DD02 (A) LIN bus 1
CEM-8F25 Relay, windshield wiper	CEM-DD02 (B) LIN bus 3
CEM-8F25 Relay, windshield wiper	CEM-DD02 Communication LSM
CEM-8F26 Relay, front windshield washer motor	CEM-DD10 (A) Communication SCL
CEM-8F26 Windshield wiper, high speed relay	CEM-DD10 (B) Communication RRX module
CEM-8F27 Relay, front windshield washer motor	CEM-DD10 Communication LSM
CEM-8F28 Tailgate washer motor relay	CEM-DD11 (A) Communication SCU
CEM-8F28 Windshield wiper, high speed relay	CEM-DD11 (B) Communication SCM
CEM-8F29 Relay, front screen washer motor	CEM-DD11 Communication CPM
CEM-8F29 Tailgate washer motor relay	CEM-DD12 Communication left-hand GDL
CEM-8F2B Windshield washer motor, relay	CEM-DD13 Communication right-hand GDL
CEM-8F2C Windshield wiper	CEM-DD20 LIN bus 9
CEM-8F2C Wipers	CEM-DD20 LIN-bus 2
CEM-8F2D Windshield wiper	CEM-DD21 LIN bus 9
CEM-8F2D Wipers	CEM-DD21 LIN-bus 2
CEM-8F2E Windshield wiper	CEM-DD22 LIN bus 9
CEM-8F2E Wipers	CEM-DD22 LIN-bus 2
CEM-8F30 Relay, headlamp wash / wipe	CEM-DD30 Communication with ACM
CEM-8F30 Windshield wiper lever	CEM-DD30 Communication with WMM
CEM-8F31 Relay, headlamp wash / wipe	CEM-DD31 Communication with LCM
CEM-8F31 Windshield wiper lever	CEM-DD31 Communication with RSM
CEM-8F32 Windshield wiper lever	CEM-DD32 Communication with LCM
CEM-8F33 Right-hand turn signal lamp	CEM-DD40 Communication with SWM
CEM-8F34 Right-hand turn signal lamp	CEM-DD41 Communication with SWM
CEM-8F37 Left-hand turn signal lamp	CEM-DD42 Communication with SWM
CEM-8F38 Left-hand turn signal lamp	CEM-DD50 Communication with SWM
CEM-8F41 Relay, tailgate wiper	CEM-DD51 Communication with SWM
CEM-8F41 Tailgate washer motor relay	CEM-DD52 Communication with SWM
CEM-8F42 Relay, tailgate wiper	CEM-DE01 Communication with BCM
CEM-8F43 Tailgate washer motor relay	CEM-DE0B Communication with ADM
CEM-8F44 Windshield wiper lever	CEM-DE11 Communication with ECM
CEM-8F45 Windshield wiper lever	CEM-DE18 Communication with CPM
CEM-8F51 Relay, headlamp wash / wipe	CEM-DE23 Communication with TRM
CEM-8F52 Relay, headlamp wash / wipe	CEM-DE29 Communication with CCM
CEM-8F61 Relay, heated rear windshield	CEM-DE2E Communication with PSM
CEM-8F62 Relay, heated rear windshield	CEM-DE30 Communication with EPS
CEM-8FA1 Relay, horn	CEM-DE43 Communication with DDM
CEM-8FA2 Relay, horn	CEM-DE45 Communication with PDM
CEM-8FA3 Relay, signal horn	CEM-DE49 Communication with SWM
CEM-8FB1 Rain sensor module (RSM)	CEM-DE51 Communication with DIM
CEM-8FB2 Rain sensor module (RSM)	CEM-DE52 Communication with AEM
CEM-8FF0 Rain sensor button	CEM-DE54 Communication with ICM
CEM-8FF1 Light emitting diode, Rain sensor button	CEM-DE58 Communication with SRS
CEM-9A01 Interior lighting	CEM-DE63 communication with PAM
CEM-9A02 Interior lighting	CEM-DE64 Communication with PHM
CEM-9C01 Glove compartment lighting	CEM-DE6E Communication with TCM
CEM-9C02 Antenna / light ring	CEM-DFO1 CAN-H, low speed network
CEM-9C03 Antenna / light ring	CEM-DFO3 CAN-H, low speed network
CEM-9E01 Entrance lighting	CEM-DFO3 CAN-H, low-speed network
CEM-9F20 Twilight sensor	CEM-DFO3 CAN-H, low-speed network
CEM-9F21 Twilight sensor	CEM-DFO4 CAN-L, low speed network
CEM-9F24 Rheostat	CEM-DFO5 CAN-H, low speed network
CEM-9F25 Rheostat	CEM-DFO6 CAN-L, low speed network
CEM-9F31 Dimmer	CEM-DFO7 CAN-H, low speed network
CEM-9F32 Dimmer	CEM-DFO7 CAN-L, low speed network
CEM-DD00 (A) LIN bus 2	CEM-DF11 CAN-H, high speed network
CEM-DD00 (B) LIN bus 3	CEM-DF13 CAN-H, high speed network
CEM-DD00 Communication with LSM	CEM-DF14 CAN-L, high speed network
CEM-DD01 (A) LIN bus 2	CEM-DF15 CAN-H, high speed network
CEM-DD01 (B) LIN bus 3	CEM-DF16 CAN-L, high speed network
CEM-DD01 Communication with LSM	CEM-DF17 CAN-H, high speed network

CEM-DF17 CAN-L, high speed network  
CEM-E000 Communication control module  
CEM-E001 Communication control module

## CPM

CPM-0018 Glow plugs  
CPM-0102 Glow plugs  
CPM-0204 Glow plugs  
CPM-0318 Fuel pump  
CPM-0402 Fuel pump  
CPM-0504 Fuel pump  
CPM-1001 Combustion fan  
CPM-1128 Combustion fan  
CPM-1204 Combustion fan  
CPM-1308 Combustion fan  
CPM-1418 Water pump  
CPM-1502 Water pump  
CPM-1604 Water pump  
CPM-2308 Control module  
CPM-3002 ECT sensor  
CPM-3141 ECT sensor  
CPM-3202 Overheat protection thermostat  
CPM-3341 Overheat protection thermostat  
CPM-3402 Flame sensor  
CPM-3541 Flame sensor  
CPM-3601 Control module  
CPM-3702 Control module  
CPM-4001 Engine coolant heater  
CPM-4101 Engine coolant heater  
CPM-4208 Engine coolant heater  
CPM-4308 Engine coolant heater  
CPM-4501 Combustion fan  
CPM-5001 Control module  
CPM-5101 Control module  
CPM-5201 Control module  
CPM-5301 Control module  
CPM-5401 Control module  
CPM-5601 Control module  
CPM-5701 Control module  
CPM-6008 Control module  
CPM-6108 Control module  
CPM-6208 Control module  
CPM-6301 Control module  
CPM-6408 Control module  
CPM-6508 Control module  
CPM-8602 Control module  
CPM-8704 Control module  
CPM-E001 Control module communication  
CPM-E003 Configuration fault  
CPM-E010 Control module

## DDM

DDM-0012 Control, driver's window  
DDM-0013 Control, passenger window  
DDM-0014 Control, left rear side window  
DDM-0015 Control, right rear side window  
DDM-0016 Child-proof lock  
DDM-0017 Control panel, driver's window  
DDM-0019 Lock, driver's door  
DDM-001A Driver's door lock  
DDM-001B Driver's door lock

DDM-001D Central locking button  
DDM-0020 Control, door mirror  
DDM-0021 Control, door mirror  
DDM-0022 Control, door mirror selector  
DDM-0023 Control, door mirror selector  
DDM-0034 Driver-side window control  
DDM-0035 Passenger-side window control  
DDM-0036 Control, left rear side window  
DDM-0037 Control, right rear side window  
DDM-0038 Control, door mirror  
DDM-0039 Child-proof lock  
DDM-003B Control, driver's window  
DDM-003C Passenger-side window control  
DDM-003D Rear left side-window control  
DDM-003E Rear right side-window control  
DDM-003F Rear-view mirror control  
DDM-0040 Rear-view mirror selector control  
DDM-0041 Door warning lamp  
DDM-0042 Door warning lamp  
DDM-0044 Door mirror lamp  
DDM-0045 Door mirror lamp  
DDM-0047 Power supply  
DDM-0049 Control module  
DDM-004A Outside temperature sensor  
DDM-004B Outside temperature sensor  
DDM-004C Control module  
DDM-004D Control module  
DDM-E001 Control module communication  
DDM-E003 Configuration fault

## DEM

DEM 0006 Feed pump  
DEM 000B Oil pressure  
DEM-0001 Temperature sensor  
DEM-0002 Pressure sensor  
DEM-0003 System voltage  
DEM-0005 Control valve  
DEM-0007 Hydraulic pressure  
DEM-0008 Control module calibration fault  
DEM-0009 Ctrl module Analog/Digital converter  
DEM-000A Power supply. Faulty voltage  
DEM-000C Control module  
DEM-E000 Control module communication  
DEM-E003 Configuration fault

## DIM

DIM-0001 Driving distance  
DIM-0001 Mileage  
DIM-0001 Vehicle speed signal  
DIM-0002 ABS warning lamp  
DIM-0002 Fuel level sensor  
DIM-0003 Fuel level sensor  
DIM-0003 SRS warning lamp  
DIM-0004 Fuel level sensor  
DIM-0005 Engine coolant temperature (ECT) sensor signal  
DIM-0005 Red general warning lamp  
DIM-0006 12-pulse vehicle speed signal  
DIM-0006 Orange general warning lamp  
DIM-0007 12-pulse vehicle speed signal  
DIM-0007 Global parameter  
DIM-0008 Fuel level sensor

DIM-0009 Fuel ejector	ECM-0030 Temperature sensor of control unit
DIM-000A D+ signal	ECM-0031 Front HO2S, bank 1 heating
DIM-000B Outside temperature sensor	ECM-0032 Engine cooling fan control module
DIM-000C Control module	ECM-0032 Front HO2S, bank 1 heating
DIM-000D Communication ECM	ECM-0033 Accel pedal (AP) pos sensor
DIM-000E Control module	ECM-0033 Bypass valve, charge air cooler (CAC)
DIM-DF13 CAN bus H-signal	ECM-0034 Bypass valve, charge air cooler (CAC)
DIM-DF14 CAN bus L signal	ECM-0035 Bypass valve, charge air cooler (CAC)
DIM-DF15 CAN bus H signal	ECM-0036 Rear HO2S, bank 1 heating
DIM-DF16 CAN bus L signal	ECM-0037 Rear HO2S, bank 1 heating
DIM-E000 Communication control module	ECM-0038 Rear HO2S, bank 1 heating
DIM-E001 Control module communication	ECM-0039 Turbocharger (TC) control system
DIM-E003 Configuration fault	ECM-003A Alternator charging
DIM-E003 Software fault	ECM-003A Generator (GEN) charging

## ECM

ECM -0017 Glow plug relay	ECM-003B Central electronic module (CEM)
ECM -2000 ECT sensor	ECM-0046 Turbocharger (TC) control valve
ECM -2100 Fuel pressure sensor	ECM-0047 Turbocharger (TC) control valve
ECM 914C Electronic throttle module (ETM)	ECM-0048 Turbocharger (TC) control valve
ECM 91AC Electronic throttle module (ETM)	ECM-0053 Front HO2S, bank 1 heating
ECM 91AC Electronic throttle module (ETM)	ECM-0054 Rear HO2S, bank 1 heating
ECM 91AC Electronic throttle module (ETM)	ECM-0069 Boost pressure sensor
ECM-0000 Engine speed (RPM) sensor	ECM-0070 Outside temperature sensor
ECM-0000 Impulse sensor	ECM-0089 Fuel pressure control valve
ECM-0000 Impulse sensor	ECM-0091 Fuel pressure control valve
ECM-0001 Secondary engine speed	ECM-0092 Fuel pressure control valve
ECM-0001 Secondary speed	ECM-0097 IAT sensor
ECM-0001 Secondary speed.	ECM-0098 IAT sensor
ECM-0002 Fuel volume control valve	ECM-0099 IAT sensor
ECM-0002 System relay output signal	ECM-0100 Air flow sensor
ECM-0003 Fuel volume control valve	ECM-0101 Mass air flow (MAF) sensor
ECM-0003 Needle lift sensor	ECM-0104 Mass air flow (MAF) sensor
ECM-0004 Accel pedal (AP) pos sensor	ECM-0105 Atmospheric pressure sensor
ECM-0004 Fuel volume control valve	ECM-0105 MAP sensor
ECM-0005 ECT sensor	ECM-0106 Boost pressure sensor
ECM-0006 Air temperature sensor	ECM-0106 MAP sensor
ECM-0008 Fuel temperature sensor	ECM-0107 MAP sensor
ECM-0009 Boost pressure sensor	ECM-0108 MAP sensor
ECM-0009 Charging pressure sensor	ECM-0109 MAP sensor
ECM-000A Atmospheric pressure signal of control unit	ECM-010F Mass air flow (MAF) sensor
ECM-000B Mass air flow (MAF) sensor	ECM-0110 IAT sensor
ECM-000D Reference voltage of control unit	ECM-0112 IAT sensor
ECM-000F Microprocessor of control unit	ECM-0112 Mass air flow (MAF) sensor
ECM-0011 Injection timing control	ECM-0113 IAT sensor
ECM-0012 A/C linear pressure sensor	ECM-0113 Mass air flow (MAF) sensor
ECM-0014 A/C-relay	ECM-0114 Mass air flow (MAF) sensor
ECM-001D Turbo charger (TC) control valve	ECM-0115 ECT sensor
ECM-001E EGR controller	ECM-0116 ECT sensor
ECM-0020 Injection timing valve	ECM-0117 ECT sensor
ECM-0021 Fuel cut-off valve	ECM-0118 ECT sensor
ECM-0022 Brake pedal position sensor	ECM-0119 ECT sensor
ECM-0023 Clutch pedal position sensor	ECM-0120 Throttle position sensor, channel 1
ECM-0024 Engine coolant heater relay 1+2	ECM-0120 Throttle unit, potentiometer 1
ECM-0025 Control unit memory fault	ECM-0121 Electronic throttle unit, potentiometer 1
ECM-0028 System relay	ECM-0122 Accelerator pedal (AP) position sensor
ECM-0029 Fuel quantity control	ECM-0122 Electronic throttle unit, potentiometer 1
ECM-002A 15-supply to the control module	ECM-0123 Accelerator pedal (AP) position sensor
ECM-002C Fuel quantity	ECM-0123 Electronic throttle unit, potentiometer 1
ECM-002F Fuel quantity regulator position sensor	ECM-0125 Lambda probe signal
ECM-0030 Front HO2S, bank 1 heating	ECM-0130 Front HO2S, bank 1

ECM-0131	Front HO2S, bank 1	ECM-0320	Engine speed [RPM] sensor signal
ECM-0132	Front HO2S, bank 1	ECM-0324	Knock sensor [KS]
ECM-0133	Front HO2S, bank 1	ECM-0325	Knock sensor
ECM-0134	Front HO2S, bank 1	ECM-0335	Engine speed [RPM] sensor
ECM-0135	Front HO2S, bank 1	ECM-0335	Impulse sensor
ECM-0135	Front lambda probe, pre-heating	ECM-0336	Engine speed [RPM] sensor
ECM-0136	Rear HO2S, bank 1	ECM-0340	Camshaft position [CMP] sensor
ECM-0136	Rear lambda probe, signal	ECM-0341	Camshaft position [CMP] sensor
ECM-0137	Rear HO2S, bank 1	ECM-0351	Ignition coil cyl 1
ECM-0138	Rear HO2S, bank 1	ECM-0352	Ignition coil cyl 2
ECM-0139	Rear HO2S, bank 1	ECM-0353	Ignition coil cyl 3
ECM-0140	Rear HO2S, bank 1	ECM-0354	Ignition coil cyl 4
ECM-0141	Rear HO2S, bank 1	ECM-0380	Glow plug relay
ECM-0141	Rear lambda probe, pre-heating	ECM-0400	EGR control
ECM-0170	Lambda integrator	ECM-0403	EGR control servo
ECM-0170	Long-term fuel trim, bank 1	ECM-0405	Position sensor (EGR)
ECM-0171	Long-term fuel trim, bank 1	ECM-0406	Position sensor (EGR)
ECM-0172	Long-term fuel trim, bank 1	ECM-0420	TWC efficiency, bank 1
ECM-0182	Fuel temperature sensor	ECM-0425	Catalytic converter temperature sensor
ECM-0183	Fuel temperature sensor	ECM-0426	Front temp sensor, catalytic converter
ECM-0184	Fuel temperature sensor	ECM-0427	Front temp sensor, catalytic converter
ECM-0190	Fuel pressure sensor	ECM-0428	Front temp sensor, catalytic converter
ECM-0191	Fuel pressure sensor	ECM-042B	Rear temp sensor, catalytic converter
ECM-0192	Fuel pressure sensor	ECM-042C	Rear temp sensor, catalytic converter
ECM-0193	Fuel pressure sensor	ECM-042D	Rear temp sensor, catalytic converter
ECM-0194	Fuel pressure sensor	ECM-0443	EVAP valve
ECM-0200	Fuel injection system driver	ECM-0444	EVAP valve
ECM-0201	Injection valve 1	ECM-0458	EVAP valve
ECM-0202	Injection valve 2	ECM-0459	EVAP valve
ECM-0203	Injection valve 3	ECM-0460	Fuel level sensor
ECM-0204	Injection valve 4	ECM-0480	Engine cooling fan (FC)
ECM-0220	Accel pedal position sensor, channel 1	ECM-0489	EGR control
ECM-0220	Throttle unit, potentiometer 2	ECM-0490	EGR control
ECM-0221	Electronic throttle unit, potentiometer 2	ECM-0500	Vehicle speed signal
ECM-0222	Accelerator pedal (AP) position sensor	ECM-0504	Brake pedal sensor
ECM-0222	Electronic throttle unit, potentiometer 2	ECM-0504	Stop lamp switch
ECM-0223	Accelerator pedal (AP) position sensor	ECM-0513	Immobilizer
ECM-0223	Electronic throttle unit, potentiometer 2	ECM-0530	A/C pressure switch (Pressostat)
ECM-0225	Throttle position sensor	ECM-0532	A/C pressure sensor
ECM-0230	Fuel pump (FP)	ECM-0533	A/C pressure sensor
ECM-0231	Fuel pump (FP)	ECM-0551	Power steering
ECM-0232	Fuel pump (FP)	ECM-0562	Battery voltage
ECM-0234	Turbocharger (TC) control	ECM-0562	System voltage
ECM-0236	Boost pressure sensor (MAP)	ECM-0563	Battery voltage
ECM-0237	Boost pressure sensor (MAP)	ECM-0571	Brake pedal sensor
ECM-0238	Boost pressure sensor (MAP)	ECM-0571	Stop lamp switch
ECM-0261	Injector cyl 1	ECM-0572	Brake pedal position sensor
ECM-0262	Injector cyl 1	ECM-0573	Brake pedal position sensor
ECM-0264	Injector cyl 2	ECM-0575	Cruise control
ECM-0265	Injector cyl 2	ECM-0578	Cruise control
ECM-0267	injector cyl 3	ECM-0579	Cruise control
ECM-0268	Injector cyl 3	ECM-0603	Engine control module (ECM)
ECM-0270	Injector cyl 4	ECM-0604	Engine control module (ECM)
ECM-0271	Injector cyl 4	ECM-0605	Engine control module (ECM)
ECM-0299	Turbocharger (TC) control	ECM-0606	Engine control module (ECM)
ECM-0300	Misfire, at least one cylinder	ECM-0607	Engine control module (ECM)
ECM-0301	Misfiring, cylinder 1	ECM-060A	Engine control module (ECM)
ECM-0302	Misfiring, cylinder 2	ECM-060B	Engine control module (ECM)
ECM-0303	Misfiring, cylinder 3	ECM-060C	Engine control module (ECM)
ECM-0304	Misfiring, cylinder 4	ECM-060C	Fuel injection system driver
ECM-0315	Impulse sensor	ECM-060D	Accelerator pedal (AP) position sensor

ECM-0610 Engine control module [ECM]	ECM-1131 Mass air flow sensor
ECM-0617 Starter motor relay	ECM-1132 Front HO2S, bank 1
ECM-061A Engine speed [RPM] signal	ECM-1132 Speed signal
ECM-061B Engine control module [ECM]	ECM-1133 Battery voltage
ECM-061C Engine control module [ECM]	ECM-1134 Engine control module
ECM-061C Engine speed [RPM] signal	ECM-1137 Rear HO2S, bank 1
ECM-061E Communication SWM	ECM-1138 Rear HO2S, bank 1
ECM-0620 Generator	ECM-113B Atmospheric pressure sensor
ECM-0622 Generator	ECM-113C Atmospheric pressure sensor
ECM-0625 Generator	ECM-113D Atmospheric pressure sensor
ECM-0626 Generator	ECM-1142 Brake pedal switch
ECM-062B Fuel injection system driver	ECM-1144 Cruise control switch
ECM-062F Engine control module [ECM]	ECM-1200 Injector output stage
ECM-0641 Reference voltage A	ECM-1200 IAT sensor
ECM-0642 Power supply 1	ECM-1201 Fuel injection system driver
ECM-0642 Reference voltage A	ECM-1202 Fuel injection system driver
ECM-0643 Power supply 1	ECM-1203 Fuel injection system driver
ECM-0643 Reference voltage A	ECM-1204 Fuel injection system driver
ECM-0645 Air conditioning (A/C) relay	ECM-120A Intake air temperature (IAT) sensor
ECM-0646 Air conditioning (A/C) relay	ECM-120C Mass air flow
ECM-0647 Air conditioning (A/C) relay	ECM-120D Intake air temperature (IAT) sensor
ECM-0651 Reference voltage B	ECM-120E Fuel pressure sensor
ECM-0652 Power supply 2	ECM-120F Fuel pressure control valve
ECM-0652 Reference voltage B	ECM-1210 Mass air flow (MAF) sensor
ECM-0653 Power supply 2	ECM-1213 Fuel injection system driver
ECM-0653 Reference voltage B	ECM-121B Mass air flow (MAF) sensor
ECM-0685 Engine control module [ECM]	ECM-121C Mass air flow (MAF) sensor
ECM-0685 System relay	ECM-121D Mass air flow (MAF) sensor
ECM-0686 Engine control module [ECM]	ECM-1220 Electronic throttle module
ECM-0686 System relay	ECM-1221 Electronic throttle module signal
ECM-0687 Engine control module [ECM]	ECM-1223 Electr throttle module communication
ECM-0687 System relay	ECM-1224 Electronic throttle module, servo 1
ECM-0691 Engine cooling fan	ECM-1225 Accel pedal position sensor, channel 2
ECM-0692 Engine cooling fan	ECM-1228 Electronic throttle module, servo 2
ECM-0703 Brake pedal sensor	ECM-122C Mass air flow (MAF) sensor
ECM-0704 Clutch pedal position sensor	ECM-122D Mass air flow (MAF) sensor
ECM-0A09 Transformer	ECM-1230 Mass air flow
ECM-0A10 Transformer	ECM-123B Mass air flow
ECM-1000 Atmospheric pressure sensor	ECM-1246 Generator (GEN)
ECM-1000 Engine control module [ECM]	ECM-125C Boost pressure sensor
ECM-1001 Engine control module [ECM]	ECM-125D Boost pressure sensor
ECM-100A Engine control module [ECM]	ECM-1260 Boost pressure sensor
ECM-1100 Outside temperature sensor	ECM-1260 Immobilizer
ECM-110A Outside temperature sensor	ECM-126B Boost pressure sensor
ECM-1111 Accelerator pedal position sensor	ECM-126C Boost pressure sensor
ECM-1112 Impulse sensor	ECM-126D Boost pressure sensor
ECM-1112 Intake Air Temperature (IAT) Sensor	ECM-1300 Mass air flow (MAF) sensor
ECM-1113 Needle lift sensor	ECM-130A Intake air leakage
ECM-1114 Secondary speed	ECM-130A Mass air flow (MAF) sensor
ECM-1116 ECT sensor	ECM-130C Mass airflow (MAF) sensor
ECM-1117 ECT sensor	ECM-1310 Mass airflow meter
ECM-1121 Engine temperature sensor	ECM-131C IAT sensor
ECM-1122 Air temperature sensor inlet	ECM-131D IAT sensor
ECM-1123 Fuel temperature sensor	ECM-1320 IAT sensor
ECM-1124 Atmospheric pressure	ECM-1320 Mass airflow meter
ECM-1127 Heated oxygen sensor (HO2S)	ECM-132C IAT sensor
ECM-112C Atmospheric pressure sensor	ECM-132D IAT sensor
ECM-112D Atmospheric pressure sensor	ECM-1335 EGR control
ECM-1130 Atmospheric pressure sensor	ECM-135F Mass air flow sensor
ECM-1130 Front HO2S, bank 1	ECM-136F Mass air flow (MAF) sensor
ECM-1131 Front HO2S, bank 1	ECM-13AD Air temperature sensor

ECM-1400 Boost pressure sensor	ECM-180A Accelerator pedal (AP) position sensor 1
ECM-1400 Intake pressure sensor	ECM-180B Accelerator pedal (AP) position sensor 2
ECM-1400 MAP sensor	ECM-180C EGR position sensor
ECM-1408 EGR control	ECM-180F Power supply sensor 1
ECM-1409 EGR control	ECM-1810 Power supply sensor 2
ECM-140A Boost pressure sensor	ECM-1811 Vehicle speed signal
ECM-140A Intake pressure sensor	ECM-1813 System relay
ECM-140A MAP sensor	ECM-1814 EGR valve
ECM-140B Outside temperature sensor	ECM-1815 Turbocharger (TC) control valve
ECM-140C Outside temperature sensor	ECM-1816 Glow plug relay
ECM-140D Outside temperature sensor	ECM-1817 Engine cooling fan (FC) relay, 1/2 speed
ECM-1410 Generator	ECM-1818 Engine cooling fan (FC) relay, 1/1 speed
ECM-1410 Outside temperature sensor	ECM-181A Air conditioning (A/C) pressure sensor
ECM-1412 EGR control	ECM-181C Glow plug indicator lamp
ECM-141A EGR position sensor	ECM-181D Malfunction indicator lamp (MIL)
ECM-141B Outside temperature sensor	ECM-181E ECT warning lamp
ECM-141E Temperature sensor, catalytic converter	ECM-1822 Fuel pressure control valve
ECM-1420 Generator	ECM-1826 Glow plug relay, position
ECM-1430 Generator	ECM-1828 Brake pedal switch
ECM-1440 Generator	ECM-1829 Clutch pedal switch
ECM-1460 A/C relay	ECM-182A Battery voltage
ECM-1461 Air conditioning (A/C) pressure sensor	ECM-182B Power supply +15
ECM-1462 Air conditioning (A/C) pressure sensor	ECM-182C Cruise control
ECM-1464 Air conditioning (A/C) pressure sensor	ECM-182E Injector 1
ECM-1500 FR alternator	ECM-182F Injector 4
ECM-1507 Turbo control	ECM-1830 Injector 3
ECM-150A Mass air flow (MAF) sensor	ECM-1831 Injector 2
ECM-1515 Brake vacuum sensor	ECM-1834 Relay, engine coolant heater 1
ECM-1517 Turbo control	ECM-1836 Relay, engine coolant heater 2
ECM-1549 Throttle system	ECM-1837 Fuel consumption signal
ECM-1551 Fuel injection system driver	ECM-183A Injector driver
ECM-1552 Fuel injection system driver	ECM-183E Immobilizer communication
ECM-1553 Fuel injection system driver	ECM-183F Engine control module (ECM)
ECM-1554 Fuel injection system driver	ECM-1880 Engine control module (ECM)
ECM-1563 Engine switch-off	ECM-1881 Fuel pressure control valve
ECM-1572 Stop lamp switch/pedal position sensor	ECM-1882 Fuel pressure
ECM-1600 Boost pressure sensor	ECM-1885 Engine control module (ECM)
ECM-1609 Ctrl module communication problems	ECM-1886 Engine control module (ECM)
ECM-160A Electronic throttle module (ETM)	ECM-1888 Engine control module (ECM)
ECM-1610 Immobilizer	ECM-1889 Stop shutter
ECM-1631 Engine control module (ECM)	ECM-1934 Vehicle speed signal
ECM-1632 Generator	ECM-1935 Stop lamp switch
ECM-1639 Engine control module (ECM)	ECM-193A Engine control module (ECM)
ECM-1656 Ctrl module communication problems	ECM-2000 ECT sensor
ECM-1667 Fuel injection system driver	ECM-2002 Particle filter
ECM-1696 Engine control module (ECM)	ECM-2008 Throttle system
ECM-1703 Brake pedal sensor	ECM-200A ECT sensor
ECM-1705 Gear position sensor	ECM-200B Injector cyl 1
ECM-1709 Clutch pedal position sensor	ECM-200C Injector cyl 1
ECM-170F Atmospheric pressure sensor / boost pressure sensor range check	ECM-200D Injector cyl 1
ECM-1794 Battery voltage	ECM-200F ECT sensor
ECM-1801 ECT sensor	ECM-201A Thermostat
ECM-1802 IAT sensor	ECM-201B Injector cyl 2
ECM-1803 Atmospheric pressure sensor	ECM-201C Injector cyl 2
ECM-1804 Boost pressure sensor	ECM-201D Injector cyl 2
ECM-1805 Fuel temperature sensor	ECM-202B Injector cyl 3
ECM-1806 Mass air flow (MAF) sensor	ECM-202C Injector cyl 3
ECM-1807 Engine speed (RPM) sensor	ECM-202D Injector cyl 3
ECM-1808 CMP sensor / RPM sensor	ECM-203B Injector cyl 4
ECM-1809 Fuel pressure sensor	ECM-203C Injector cyl 4
	ECM-203D Injector cyl 4

ECM-204B Injector cyl 5  
 ECM-204C Injector cyl 5  
 ECM-204D Injector cyl 5  
 ECM-2080 Front temp sensor, catalytic converter  
 ECM-2084 Rear temp sensor, catalytic converter  
 ECM-2100 Front HO2S  
 ECM-2100 Fuel pressure sensor  
 ECM-2100 Throttle motor  
 ECM-2101 Throttle motor  
 ECM-2107 Electronic throttle unit  
 ECM-2108 Electronic throttle unit  
 ECM-210A Front heated oxygen sensor (HO2S)  
 ECM-210C Long-term fuel trim, bank 1  
 ECM-210D Long-term fuel trim, bank 1  
 ECM-210E Front heated oxygen sensor (HO2S)  
 ECM-210F Front heated oxygen sensor (HO2S)  
 ECM-2110 Electronic throttle unit  
 ECM-2110 Front heated oxygen sensor (HO2S)  
 ECM-2111 Electronic throttle unit  
 ECM-2112 Electronic throttle unit  
 ECM-2119 Electronic throttle unit  
 ECM-211A Fuel pressure  
 ECM-211C Long-term fuel trim, bank 2  
 ECM-211D Long-term fuel trim, bank 2  
 ECM-2120 Accel pedal (AP) pos sensor, circuit 1  
 ECM-2120 Front heated oxygen sensor (HO2S)  
 ECM-2120 Fuel pump (FP) control module  
 ECM-2121 Accel pedal (AP) pos sensor, circuit 1  
 ECM-2122 Accel pedal (AP) pos sensor, circuit 1  
 ECM-2123 Accel pedal (AP) pos sensor, circuit 1  
 ECM-2124 Accel pedal (AP) pos sensor, circuit 1  
 ECM-2125 Accel pedal (AP) pos sensor, circuit 2  
 ECM-2126 Accel pedal (AP) pos sensor, circuit 2  
 ECM-2127 Accel pedal (AP) pos sensor, circuit 2  
 ECM-2128 Accel pedal (AP) pos sensor, circuit 2  
 ECM-2129 Accel pedal (AP) pos sensor, circuit 2  
 ECM-212C Long-term fuel trim, bank 1  
 ECM-212D Long-term fuel trim, bank 1  
 ECM-2130 Fuel temperature sensor  
 ECM-2135 Accel pedal (AP) pos sensor, circuit 2  
 ECM-2138 Accel pedal (AP) pos sensor, circuit 2  
 ECM-213C Long-term fuel trim, bank 2  
 ECM-213D Long-term fuel trim, bank 2  
 ECM-2141 Control valve inlet  
 ECM-2142 Control valve inlet  
 ECM-216C Long-term fuel trim, bank 1  
 ECM-216D Long-term fuel trim, bank 1  
 ECM-2176 Throttle unit motor  
 ECM-217C Long-term fuel trim, bank 2  
 ECM-217D Long-term fuel trim, bank 2  
 ECM-21AC Long-term fuel trim load, bank1  
 ECM-21AD Long-term fuel trim load, bank1  
 ECM-21CC Long-term fuel trim, idling, bank 1  
 ECM-21CD Long-term fuel trim, idling, bank 1  
 ECM-21EO Long-term fuel trim, bank 1  
 ECM-21EB Long-term fuel trim, bank 1  
 ECM-21EC Long-term fuel trim, bank 1  
 ECM-21ED Long-term fuel trim, bank 1  
 ECM-21FO Long-term fuel trim, bank 2  
 ECM-21FB Long-term fuel trim, bank 2  
 ECM-21FC Long-term fuel trim, bank 2

ECM-21FD Long-term fuel trim, bank 2  
 ECM-2200 Rear heated oxygen sensor (HO2S)  
 ECM-220A Rear heated oxygen sensor (HO2S)  
 ECM-220B Rear heated oxygen sensor (HO2S)  
 ECM-220F Rear heated oxygen sensor (HO2S)  
 ECM-2210 Rear heated oxygen sensor (HO2S)  
 ECM-2211 Malfunction indicator light  
 ECM-2212 Glow warning lamp  
 ECM-2213 System relay  
 ECM-2214 Glow plug relay control  
 ECM-221B Rear HO2S ageing, bank 1  
 ECM-221C Rear HO2S ageing, bank 1  
 ECM-221D Rear HO2S ageing, bank 1  
 ECM-2220 Rear HO2S bank 1  
 ECM-2221 Injection timing valve  
 ECM-2222 EGR converter  
 ECM-2223 A/C-relay  
 ECM-2224 Auxiliary heater relay  
 ECM-2228 Atmospheric pressure sensor  
 ECM-2229 Atmospheric pressure sensor  
 ECM-222B Rear HO2S, bank 1  
 ECM-222C Rear HO2S, bank 1  
 ECM-222D Rear HO2S, bank 1  
 ECM-223B Rear HO2S, bank 1  
 ECM-223C Rear HO2S, bank 1  
 ECM-223D Rear HO2S, bank 1  
 ECM-2240 Rear HO2S, switched  
 ECM-2262 Turbocharger control valve  
 ECM-2263 Turbocharger (TC) control  
 ECM-2297 Front HO2S, bank 1  
 ECM-2299 AP pos sensor/stop lamp switch  
 ECM-2299 Brake pedal sensor/AP pos sensor  
 ECM-2300 Ignition coil 1  
 ECM-2300 Injector cylinder 1  
 ECM-2300 Rear HO2S, bank 2, heating  
 ECM-2301 Ignition coil 1  
 ECM-2303 Ignition coil 2  
 ECM-2304 Ignition coil 2  
 ECM-230A Fuel system  
 ECM-2310 Injection valve, cyl 1  
 ECM-2311 Injector 1  
 ECM-2312 Injector 2  
 ECM-2313 Injector 3  
 ECM-2314 Injector 4  
 ECM-2315 Injector 5  
 ECM-231B Rear HO2S aging, bank 2  
 ECM-231C Rear HO2S aging, bank 2  
 ECM-231D Rear HO2S aging, bank 2  
 ECM-2320 Injection valve, cyl 2  
 ECM-2320 Rear HO2S, bank 2  
 ECM-232B Rear HO2S, bank 2  
 ECM-232C Rear HO2S, bank 2  
 ECM-232D Rear HO2S, bank 2  
 ECM-2330 Injection valve, cyl 3  
 ECM-2330 Injector cylinder 4  
 ECM-233B Rear HO2S, bank 2  
 ECM-233C Rear HO2S, bank 2  
 ECM-233D Rear HO2S, bank 2  
 ECM-2340 Injection valve, cyl 4  
 ECM-2340 Injector cylinder 5  
 ECM-2350 Injector 5

ECM-2360 Injector 6	ECM-250B Front HO2S, bank 2, heating
ECM-23A0 Injection valve, cyl 1	ECM-250C Front HO2S, bank 2, heating
ECM-23B0 Injection valve, cyl 2	ECM-250D Front HO2S, bank 2, heating
ECM-23C0 Injection valve, cyl 3	ECM-2510 Fuel pressure sensor
ECM-23D0 Injection valve, cyl 4	ECM-2510 Fuel pressure sensor
ECM-23X0 Injector cylinder x	ECM-2520 Fuel pressure
ECM-2400 Front HO2S, bank 1, heating	ECM-252D Front HO2S, bank 2
ECM-2400 Fuel pump [FP] relay	ECM-253B Front HO2S, bank 2
ECM-240B Front HO2S, bank 1, heating	ECM-2540 Fuel pressure
ECM-240C Front HO2S, bank 1, heating	ECM-254B Front HO2S, bank 2, heating
ECM-240D Front HO2S, bank 1, heating	ECM-254C Front HO2S, bank 2, heating
ECM-2410 Fuel system	ECM-254D Front HO2S, bank 2, heating
ECM-242D Front HO2S, bank 1	ECM-2550 Front HO2S, bank 2
ECM-242F Particle trap	ECM-2550 Fuel pressure too low
ECM-2430 Fuel system	ECM-255B Front HO2S, bank 2
ECM-243B Front HO2S, bank 1	ECM-255C Front HO2S, bank 2
ECM-2440 Fuel system	ECM-255D Front HO2S, bank 2
ECM-244B Front HO2S, bank 1, heating	ECM-2560 Fuel pressure too high
ECM-244C Front HO2S, bank 1, heating	ECM-2564 Position sensor turbocharger (TC)
ECM-244D Front HO2S, bank 1, heating	ECM-2565 Position sensor turbocharger (TC)
ECM-2450 Front HO2S, bank 1	ECM-2566 Position sensor turbocharger (TC)
ECM-2452 Particle trap pressure sensor	ECM-256B Front HO2S, bank 2
ECM-2453 Pressure sensor, particle filter	ECM-2570 Front HO2S, bank 2
ECM-2454 Pressure sensor, particle filter	ECM-257B Front HO2S, bank 2
ECM-2455 pressure sensor, particle filter	ECM-257C Front HO2S, bank 2
ECM-2456 Pressure sensor, particle filter	ECM-2584 Additive dosing module (ADM)
ECM-245B Front HO2S, bank 1	ECM-2585 Additive dosing module (ADM)
ECM-245C Front HO2S, bank 1	ECM-258C Front HO2S, bank 2
ECM-245D Front HO2S, bank 1	ECM-258D Front HO2S, bank 2
ECM-246B Front HO2S, bank 1	ECM-259B Front HO2S, bank 2
ECM-2470 Front HO2S, bank 1	ECM-25AB Front HO2S, bank 2
ECM-247B Front HO2S, bank 1	ECM-25B0 Front HO2S, bank 2
ECM-247C Front HO2S, bank 1	ECM-25BB Front HO2S, bank 2
ECM-248C Front HO2S, bank 1	ECM-25BC Front HO2S, bank 2
ECM-248D Front HO2S, bank 1	ECM-25BD Front HO2S, bank 2
ECM-249B Front HO2S, bank 1	ECM-25C0 Front HO2S, bank 2
ECM-24A0 Engine Control Module (ECM)	ECM-2600 Fuel pressure sensor
ECM-24A0 Switched front HO2S	ECM-260A Fuel pressure sensor
ECM-24AB Front HO2S, bank 1	ECM-260A Long-term fuel trim
ECM-24B0 Engine Control Module (ECM)	ECM-2610 Fuel pump (FP) control module
ECM-24B0 Front HO2S, bank 1	ECM-261A Fuel pressure system
ECM-24BB Front HO2S, bank 1	ECM-261A Long-term fuel trim
ECM-24BC Front HO2S, bank 1	ECM-262A Long-term fuel trim
ECM-24BD Front HO2S, bank 1	ECM-263A Long-term fuel trim
ECM-24C0 Front HO2S, bank 1	ECM-2682 By-pass valve
ECM-24CB Front HO2S, bank 1	ECM-2683 By-pass valve
ECM-24CC Front HO2S, bank 1	ECM-268A Long-term fuel trim
ECM-24CD Front HO2S, bank 1	ECM-26FO Fuel system
ECM-24D0 Front HO2S, bank 1	ECM-2700 Fuel pressure sensor
ECM-2500 Front HO2S, bank 2, heating	ECM-2700 Fuel system
ECM-2500 Fuel pressure sensor	ECM-270A Adaptive lambda control, bank 2
ECM-2501 Fuel pressure too high	ECM-270B ECT sensor
ECM-2502 Alternator charging	ECM-271A Adaptive lambda control, bank 2
ECM-2502 Fuel pressure too high	ECM-2720 ECT sensor
ECM-2503 Alternator charging	ECM-272A Adaptive lambda control, bank 2
ECM-2503 Fuel pressure too low	ECM-272D ECT sensor
ECM-2504 Alternator charging	ECM-273C ECT sensor
ECM-2504 Fuel pressure too high	ECM-273D ECT sensor
ECM-2505 Fuel pressure too low	ECM-2740 ECT sensor
ECM-2509 Fuel pressure too low	ECM-274D ECT sensor
ECM-250A Long-term fuel trim	ECM-278A Adaptive lambda control, bank 2

ECM-2800 Front HO2S, bank 1	ECM-2C1C Injector cyl 2
ECM-2800 Fuel level	ECM-2C1D Injector cyl 2
ECM-2800 Fuel pressure control valve	ECM-2C2B Injector cyl 3
ECM-280A Front HO2S	ECM-2C2C Injector cyl 3
ECM-280B Fuel pressure sensor	ECM-2C2D Injector cyl 3
ECM-280C Fuel pressure sensor	ECM-2C3B Injector cyl 4
ECM-280C Switched front HO2S	ECM-2C3C Injector cyl 4
ECM-280D Fuel pressure sensor	ECM-2C3D Injector cyl 4
ECM-2810 Front HO2S, bank 1, heating	ECM-2C4B Injector cyl 5
ECM-2810 Fuel level too low	ECM-2C4C Injector cyl 5
ECM-2820 Front HO2S, bank 1, heating	ECM-2C4D Injector cyl 5
ECM-2820 HO2S bank 1, preheating	ECM-2C5B Injector cyl 6
ECM-2820 Fuel level too low	ECM-2C5C Injector cyl 6
ECM-2830 Front HO2S, bank 1	ECM-2C5D Injector cyl 6
ECM-2830 Fuel level too low	ECM-2E00 Fuel pressure control valve
ECM-2840 Front HO2S, bank 1	ECM-2E10 Fuel pressure control valve
ECM-2850 Front HO2S, bank 1	ECM-2E20 Fuel pressure control valve
ECM-2860 Front HO2S, bank 1	ECM-2E30 Fuel pressure control valve
ECM-2870 Front HO2S, bank 1	ECM-3000 Camshaft position (CMP) sensor
ECM-288A Front HO2S, bank 1	ECM-3000 ECM internal fault
ECM-289A Front HO2S, bank 1	ECM-300A Camshaft pos (CMP) sensor, intake
ECM-28AA Front HO2S, bank 1	ECM-3010 Camshaft pos (CMP) sensor, exhaust
ECM-28C0 Front HO2S, bank 1	ECM-3010 ECM internal fault
ECM-2900 Fuel pressure control valve	ECM-301A Camshaft pos (CMP) sensor, exhaust
ECM-290A Front HO2S, bank 2	ECM-3020 Camshaft pos (CMP) sensor
ECM-290A Front lambda probe, bank 2	ECM-3020 ECM internal fault
ECM-290B Fuel pressure	ECM-303C Front knock sensor (KS)
ECM-290C Fuel pressure	ECM-303D Front knock sensor (KS)
ECM-290D Fuel pressure	ECM-304C Rear knock sensor (KS)
ECM-2910 Front HO2S preheating, bank 2	ECM-304D Rear knock sensor (KS)
ECM-291B Fuel pump control module	ECM-3050 Knock control
ECM-291C Fuel pump control module	ECM-305C Knock control
ECM-291D Fuel pump control module	ECM-305D Knock control
ECM-2920 HO2S preheating, bank 2	ECM-3060 Knock control
ECM-2A00 Center HO2S	ECM-3100 Engine speed (RPM) sensor
ECM-2A00 Pressure sensor particle trap	ECM-3100 Misfire, at least one cylinder
ECM-2AOA Center HO2S	ECM-310A Engine speed (RPM) sensor
ECM-2AOA Rear HO2S bank 1	ECM-310C Misfire, at least one cylinder
ECM-2AOC Fuel temperature sensor	ECM-310D Misfire, at least one cylinder
ECM-2AOD Fuel temperature sensor	ECM-3110 Engine speed (RPM) sensor
ECM-2A10 Center HO2S	ECM-3110 Misfire cylinder 1
ECM-2A10 Temperature sensor, particle trap	ECM-311C Misfire cylinder 1
ECM-2A1A Rear HO2S, bank 1 aging	ECM-311D Misfire cylinder 1
ECM-2A20 Particle trap	ECM-3120 Misfire cylinder 2
ECM-2A20 Rear HO2S, bank 1, heating	ECM-312C Misfire cylinder 2
ECM-2A2A Rear HO2S, bank 1, heating	ECM-312D Misfire cylinder 2
ECM-2A30 Particle trap. Blocked	ECM-3130 Misfire cylinder 3
ECM-2A40 Particle trap. Overloaded	ECM-313C Misfire cylinder 3
ECM-2A50 Particle trap. Defective signal	ECM-313D Misfire cylinder 3
ECM-2B00 Fuel temperature sensor	ECM-3140 Misfire cylinder 4
ECM-2B00 Thermostat	ECM-314C Misfire cylinder 4
ECM-2BOA Fuel temperature sensor	ECM-314D Misfire cylinder 4
ECM-2BOA Rear lambda probe, bank 2	ECM-3150 Misfire cylinder 5
ECM-2B1A Rear HO2S aging, bank 2	ECM-315C Misfire cylinder 5
ECM-2B20 HO2S bank 2, preheating	ECM-315D Misfire cylinder 5
ECM-2B2A Rear HO2S preheating, bank 2	ECM-3200 Ignition coil
ECM-2C00 Fuel temperature sensor	ECM-3210 Misfire cylinder 1
ECM-2COB Injector cyl 1	ECM-321C Misfire cylinder 1
ECM-2COC Injector cyl 1	ECM-321D Misfire cylinder 1
ECM-2COD Injector cyl 1	ECM-3220 Misfire cylinder 2
ECM-2C1B Injector cyl 2	ECM-322C Misfire cylinder 2

ECM-322D Misfire cylinder 2	ECM-3533 Misfire cylinder 3
ECM-3230 Misfire cylinder 3	ECM-3533 Misfire, TWC damage
ECM-323C Misfire cylinder 3	ECM-353B Ignition coil cylinder 4
ECM-323D Misfire cylinder 3	ECM-353C Ignition coil cylinder 4
ECM-3240 Misfire cylinder 4	ECM-353D Ignition coil cylinder 4
ECM-324C Misfire cylinder 4	ECM-3542 Misfire, emission
ECM-324D Misfire cylinder 4	ECM-3543 Misfire cylinder 4
ECM-3250 Misfire cylinder 5	ECM-3543 Misfire, TWC damage
ECM-325C Misfire cylinder 5	ECM-354B Ignition coil cylinder 5
ECM-325D Misfire cylinder 5	ECM-354C Ignition coil cylinder 5
ECM-3260 Misfire cylinder 6	ECM-354D Ignition coil cylinder 5
ECM-326C Misfire cylinder 6	ECM-3552 Misfire, emission
ECM-326D Misfire cylinder 6	ECM-3553 Misfire cylinder 5
ECM-3300 Engine speed (RPM) sensor	ECM-3553 Misfire, [TWC] damage
ECM-3300 Ignition coil cylinder 1	ECM-3562 Misfire, emission
ECM-330B Engine speed (RPM) sensor	ECM-3563 Misfire cylinder 6
ECM-3310 Ignition coil cylinder 2	ECM-3600 Engine shut down
ECM-3311 Injection timing	ECM-360B Ignition coil cylinder 1
ECM-3320 Ignition coil cylinder 3	ECM-360C Ignition coil cylinder 1
ECM-3330 Ignition coil cylinder 4	ECM-360D Ignition coil cylinder 1
ECM-3340 Ignition coil cylinder 5	ECM-361B Ignition coil cylinder 2
ECM-3350 Ignition coil cylinder 6	ECM-361C Ignition coil cylinder 2
ECM-33X0 Ignition coil x	ECM-361D Ignition coil cylinder 2
ECM-3400 Camshaft pos (CMP) sensor, intake	ECM-362B Ignition coil cylinder 3
ECM-3400 Knock sensor (KS)	ECM-362C Ignition coil cylinder 3
ECM-340A Knock sensor (KS)	ECM-362D Ignition coil cylinder 3
ECM-340B Camshaft pos (CMP) sensor, intake	ECM-363B Ignition coil cylinder 4
ECM-340C Camshaft pos sensor, intake	ECM-363C Ignition coil cylinder 4
ECM-340D Camshaft pos sensor, intake	ECM-363D Ignition coil cylinder 4
ECM-3410 Camshaft pos (CMP) sensor, exhaust	ECM-364B Ignition coil cylinder 5
ECM-3410 Knock sensor (KS) front	ECM-364C Ignition coil cylinder 5
ECM-3410 Rear knock sensor (KS)	ECM-364D Ignition coil cylinder 5
ECM-341A Knock sensor (KS), rear	ECM-365B Ignition coil cylinder 6
ECM-341B Camshaft pos (CMP) sensor, exhaust	ECM-365C Ignition coil cylinder 6
ECM-341C Camshaft pos sensor, exhaust	ECM-365D Ignition coil cylinder 6
ECM-341D Camshaft pos sensor, exhaust	ECM-4000 Canister purge (CP) valve
ECM-3420 Knock sensor (KS) rear	ECM-4007 Evaporative emission (EVAP) system
ECM-342B Camshaft position (CMP) sensor	ECM-4008 Canister purge (CP) valve, leakage
ECM-3450 Knock sensor (KS), test pulse	ECM-400A Canister purge (CP) valve
ECM-3460 Knock sensor (KS), test pulse	ECM-400C Fuel tank system, leakage
ECM-34E0 Knock sensor (KS), offset	ECM-400C TWC efficiency, bank 1
ECM-34F0 Knock sensor (KS), test pulse	ECM-4010 EVAP canister shut-off valve
ECM-3502 Misfire, at least one cylinder	ECM-4010 Leak diagnostic unit, pump
ECM-3503 Misfire, at least one cylinder	ECM-4019 EVAP canister shut-off valve
ECM-3503 Misfire, catalytic converter damage	ECM-401C TWC efficiency, bank 2
ECM-350B Ignition coil cylinder 1	ECM-4020 Fuel tank pressure sensor
ECM-350C Ignition coil cylinder 1	ECM-4024 Leak diagnostic unit, pump
ECM-350D Ignition coil cylinder 1	ECM-402A Fuel tank pressure sensor
ECM-3512 Misfire, emission	ECM-4030 Leak diagnostic unit, preheating
ECM-3513 Misfire cylinder 1	ECM-4038 Fuel tank filler cap missing. Major leak
ECM-3513 Misfire, TWC damage	ECM-4047 Canister purge (CP) valve / EVAP canister shut-off valve
ECM-351B Ignition coil cylinder 2	ECM-404C Fuel tank system, major leak
ECM-351C Ignition coil cylinder 2	ECM-4050 Fuel level sensor
ECM-351D Ignition coil cylinder 2	ECM-405A Fuel level sensor
ECM-3522 Misfire, emission	ECM-405C Fuel level sensor
ECM-3523 Misfire cylinder 2	ECM-406C Fuel tank system, minor leak
ECM-3523 Misfire, TWC damage	ECM-4201 TWC efficiency
ECM-352B Ignition coil cylinder 3	ECM-420C EVAP valve. Open
ECM-352C Ignition coil cylinder 3	ECM-420D EVAP. Closed
ECM-352D Ignition coil cylinder 3	ECM-421B Canister purge (CP) valve
ECM-3532 Misfire, emission	

ECM-421C EVAP valve	ECM-500C Engine speed (RPM) sensor signal
ECM-421D EVAP valve	ECM-500D Engine speed (RPM) sensor signal
ECM-4308 Fuel tank system, leakage	ECM-5100 Malfunction indicator lamp (MIL), TCM
ECM-430C Fuel tank system, leakage	ECM-5100 Vehicle speed signal
ECM-430D Leak diagnostic	ECM-510D Vehicle speed signal
ECM-4310 Leak diagnostic unit, pump	ECM-510F Vehicle speed signal
ECM-431A Leak diagnostic unit, pump	ECM-5110 Malfunction indicator lamp (MIL), CEM
ECM-431B Leak diagnostic unit, preheating	ECM-511D Vehicle speed signal
ECM-431C Leak diagnostic unit, preheating	ECM-512B Malfunction indicator lamp (MIL)
ECM-431D Leak diagnostic unit, preheating	ECM-512D Vehicle speed signal
ECM-4320 Leak diagnostic unit, valve	ECM-5130 Malfunction indicator lamp (MIL), TCM
ECM-432A Leak diagnostic unit, valve	ECM-513B Malfunction indicator lamp (MIL), TCM
ECM-432B Leak diagnostic unit, valve	ECM-5200 Engine speed (RPM) sensor
ECM-432C Leak diagnostic unit, preheating	ECM-5200 Starter motor signal
ECM-432D Leak diagnostic unit, preheating	ECM-5200 A/C pressure sensor
ECM-4338 Fuel tank filler cap missing	ECM-520B A/C pressure sensor
ECM-433B Leak diagnostic unit, pump	ECM-520C A/C pressure sensor
ECM-433C Leak diagnostic unit, pump	ECM-520D A/C pressure sensor
ECM-433D Leak diagnostic unit, pump	ECM-5300 Vehicle speed signal
ECM-4340 Fuel tank filler cover, lock	ECM-530B Communication, TCM
ECM-434C Fuel tank system, leakage	ECM-530B Vehicle speed signal
ECM-4350 Leak diagnostic unit, heater element.	ECM-530C Speed signal too high
ECM-4360 Leak diagnostic unit	ECM-530D DTC in another control module
ECM-436B Leak diagnostic unit	ECM-530D Speed signal too low
ECM-436C Leak diagnostic unit	ECM-5310 Communication problems with TCM
ECM-436D Leak diagnostic unit	ECM-531D Control module
ECM-4380 Fuel tank filler cap missing	ECM-532D MIL requested by throttle unit
ECM-439C Fuel tank system, leakage	ECM-5340 Communication problems with CEM
ECM-4400 EGR valve	ECM-5400 Oil quality sensor
ECM-4400 Fuel level sensor	ECM-540A Oil quality sensor
ECM-4400 Gas system	ECM-540B Oil grade, level and temp sensor
ECM-4405 EGR control	ECM-540C Oil grade, level and temp sensor
ECM-440A Long-term fuel trim	ECM-540D Oil grade, level and temp sensor
ECM-440B Fuel level sensor	ECM-5500 Oil level
ECM-440C Fuel level sensor	ECM-550D Oil level
ECM-440D Fuel level sensor	ECM-5600 Oil level sensor
ECM-4411 Fuel cut-off valve	ECM-5630 Oil level
ECM-4412 Fuel quantity regulation	ECM-5700 Gear position sensor
ECM-4413 Position sensor	ECM-5800 Configuration fault
ECM-441D EGR control	ECM-580F Engine Control Module (ECM)
ECM-4420 Position sensor (EGR)	ECM-5840 Engine Control Module (ECM)
ECM-4421 Engine control module	ECM-5850 Configuration error
ECM-4422 Engine control module	ECM-586F Configuration fault
ECM-4423 Engine control module	ECM-6000 A/C relay signal
ECM-4433 Immobilizer, communication fault	ECM-600B Turbocharger (TC) control valve
ECM-4438 EGR control	ECM-600C Turbocharger (TC) control valve
ECM-444D EGR control	ECM-600D Turbocharger (TC) control valve
ECM-445D EGR control	ECM-601C Turbocharger (TC) control system
ECM-4460 EGR control	ECM-602D Turbocharger (TC) control system
ECM-4477 EGR control	ECM-603C Turbocharger (TC) control system
ECM-4487 EGR control	ECM-603D Turbocharger (TC) control system
ECM-4490 EGR valve	ECM-6100 Engine cooling fan
ECM-44AO EGR valve	ECM-6110 Camshaft position control, intake
ECM-44BO EGR valve	ECM-6110 Engine cooling fan
ECM-4801 TWC efficiency, bank 1	ECM-611B Camshaft control, intake
ECM-4901 TWC efficiency, bank 2	ECM-6120 Engine cooling fan
ECM-4A30 Starter relay.	ECM-612B Camshaft reset valve, intake
ECM-5000 A/C linear pressure sensor	ECM-612C Camshaft reset valve, intake
ECM-5000 Engine speed (RPM) sensor signal	ECM-612D Camshaft reset valve, intake
ECM-500A A/C pressure sensor	ECM-6140 Camshaft control, exhaust
ECM-500B Engine speed (RPM) sensor signal	ECM-614B Camshaft control, exhaust

ECM-616B Camshaft reset valve, exhaust	ECM-673D Camshaft position, exhaust. Low
ECM-616B Camshaft reset valve, intake	ECM-673D Mass airflow. Impaired performance
ECM-616C Camshaft reset valve, exhaust	ECM-674C Camshaft position, intake. High
ECM-616C Camshaft reset valve, intake	ECM-674D Camshaft position, intake. Low
ECM-616D Camshaft reset valve, exhaust	ECM-6750 Camshaft control, exhaust, lock function
ECM-616D Camshaft reset valve, intake	ECM-6760 Camshaft control, intake, lock function
ECM-6200 AACV	ECM-6800 Turbocharger (TC) control valve
ECM-6200 Engine cooling fan (FC)	ECM-6800 Variable nozzle turbo (VNT) governor
ECM-6207 AACV	ECM-6805 Turbocharger (TC) control valve
ECM-620A Idling speed	ECM-6806 Turbocharger (TC) control system flow fault
ECM-620B Engine cooling fan control module	ECM-680B Engine cooling fan (FC) control modules
ECM-620C Engine cooling fan (FC)	ECM-680C Engine cooling fan (FC) control modules
ECM-620D Engine cooling fan (FC)	ECM-680D Engine cooling fan (FC) control modules
ECM-621B Engine cooling fan (FC)	ECM-6810 Turbo control valve
ECM-621C Engine cooling fan (FC)	ECM-6814 Turbocharger (TC) control
ECM-621D Engine cooling fan (FC)	ECM-6820 Turbo control valve
ECM-6220 Engine cooling fan (FC)	ECM-683D Turbo control valve
ECM-6300 Battery voltage	ECM-6870 By-pass valve intercooler
ECM-6300 ETS warning lamp	ECM-6880 By-pass valve intercooler
ECM-6300 ETS warning lamp	ECM-688D By-pass valve intercooler
ECM-630B A/C relay	ECM-6890 Bypass valve, charge air cooler (CAC) (SAE J1930)
ECM-630C A/C relay	ECM-6898 Bypass valve, charge air cooler (CAC) (SAE J1930)
ECM-630D A/C relay	ECM-68AD Bypass valve, intercooler
ECM-6310 ETS warning lamp	ECM-68BD Bypass valve, intercooler
ECM-6310 Fuel shut-off valve	ECM-68C7 By-pass valve intercooler
ECM-6310 ETS malfunction indicator lamp (MIL)	ECM-68D7 By-pass valve intercooler
ECM-639A Injector class not programmed	ECM-6A00 Interlock
ECM-6400 Camshaft reset valve, intake	ECM-6B00 Malfunction indicator lamp (MIL)
ECM-640A Camshaft control, intake	ECM-700C Engine control module (ECM)
ECM-640A Camshaft reset valve	ECM-700D Engine control module (ECM)
ECM-640C Turbocharger (TC) control system	ECM-7010 Engine control module (ECM)
ECM-640D Turbocharger (TC) control system	ECM-7020 Engine control module (ECM)
ECM-640F Camshaft position, intake	ECM-7100 Engine control module (ECM)
ECM-640F Camshaft reset valve	ECM-7100 Immobilizer communication
ECM-6410 Camshaft reset valve, exhaust	ECM-710A CAN communication
ECM-641A Camshaft control, exhaust	ECM-710A Real time clock
ECM-641A Camshaft reset valve, exhaust	ECM-710B Immobilizer communication
ECM-641F Camshaft position, exhaust	ECM-710C Immobilizer Communication
ECM-641F Camshaft reset valve, exhaust	ECM-710D Immobilizer Communication
ECM-643A Camshaft position, exhaust	ECM-7110 Engine control module (ECM)
ECM-643A Camshaft position, intake	ECM-7110 Immobilizer
ECM-6440 Camshaft reset valve	ECM-711A Engine control module (ECM)
ECM-644A Camshaft position, exhaust	ECM-711B Immobilizer
ECM-650B Engine cooling fan (FC)	ECM-711C Immobilizer
ECM-650C Engine cooling fan (FC)	ECM-7120 Engine control module (ECM)
ECM-650D Engine cooling fan (FC)	ECM-7140 Engine control module (ECM)
ECM-6600 Glow plug relay	ECM-7150 Engine control module (ECM)
ECM-6600 Starter motor relay	ECM-715D Engine control module (ECM)
ECM-660B Malfunction indicator lamp (MIL)	ECM-7160 Engine control module (ECM)
ECM-660C Malfunction indicator lamp (MIL)	ECM-716D Engine control module (ECM)
ECM-660D Malfunction indicator lamp (MIL)	ECM-7170 Engine control module (ECM)
ECM-6620 Glow plug control	ECM-7170 Engine cooling fan (FC) control module
ECM-6630 Glow plug	ECM-7180 ECM, temperature sensor
ECM-6700 Engine pads	ECM-720A ECM
ECM-670C Camshaft position, intake	ECM-720A Immobilizer communication
ECM-670D Camshaft position, intake	ECM-720B ECM
ECM-6710 EGR regulation flow too low	ECM-721A Immobilizer
ECM-671C Camshaft position, exhaust. High	ECM-7300 Gear position sensor
ECM-671D Camshaft position, exhaust. Low	ECM-730A Engine control module (ECM)
ECM-6720 EGR regulation flow too high	
ECM-673C Camshaft position, exhaust. High	

ECM-730B Gear position sensor	ECM-901E Control module
ECM-740A Engine control module (ECM)	ECM-902A Communication control module
ECM-740B Communication CEM	ECM-902A Throttle unit communication
ECM-740C Communication CEM	ECM-902B ETM communication
ECM-7500 Speed signal	ECM-902C Engine control module (ECM)
ECM-7510 Speed signal	ECM-903C Throttle position (TP) sensor
ECM-7520 Engine control module (ECM)	ECM-903F ETM, internal fault.
ECM-7600 Immobilizer	ECM-904C MIL requested by throttle unit
ECM-7610 Immobilizer	ECM-904D Pedal sensor fault
ECM-7620 Immobilizer	ECM-9050 Memory fault in RAM
ECM-7700 Engine control module (ECM)	ECM-9060 Memory fault in ROM
ECM-8000 +30-supply to control module	ECM-9070 Engine control module (ECM)
ECM-8000 12 volt power supply	ECM-9100 Clutch pedal position sensor
ECM-8000 Battery voltage	ECM-9100 Control valve inlet
ECM-800B System relay	ECM-9100 Engine control module (ECM)
ECM-800C System relay	ECM-910B Clutch pedal sensor
ECM-800D System relay	ECM-910C Clutch pedal sensor
ECM-8010 Battery voltage	ECM-910D Clutch pedal sensor
ECM-8010 System relay output	ECM-910E Throttle unit, internal fault
ECM-801A System relay	ECM-9110 Clutch pedal position sensor
ECM-801B System relay	ECM-9110 Control valve inlet
ECM-801C System relay	ECM-9117 Throttle unit
ECM-801D System relay	ECM-911A Throttle unit communication
ECM-810C 5 volt power supply	ECM-911B Clutch pedal sensor
ECM-810D 5 volt power supply	ECM-911C Clutch pedal sensor
ECM-8200 Battery voltage	ECM-911D Clutch pedal sensor
ECM-820A System relay	ECM-9120 Control valve inlet
ECM-820C Battery voltage	ECM-912A ECMI communication
ECM-820D Battery voltage	ECM-9130 Control valve inlet
ECM-8210 System relay	ECM-913C Throttle unit
ECM-821B System relay	ECM-913F Engine control module (ECM)
ECM-8300 Alternator control module (ACM)	ECM-913F Throttle unit
ECM-830B Alternator control module (ACM)	ECM-9140 Control valve inlet
ECM-830C Alternator control module (ACM)	ECM-914C Throttle unit
ECM-830D Alternator control module (ACM)	ECM-914F Throttle unit
ECM-8400 5 volt power supply	ECM-9150 Control valve inlet
ECM-8410 5 volt power supply	ECM-9150 Throttle unit
ECM-8420 Power supply 2	ECM-9160 Throttle unit
ECM-8430 Power supply 3	ECM-9170 Throttle unit
ECM-8500 5 volt power supply	ECM-917F Accelerator pedal (AP) position sensor
ECM-850C 5 volt power supply	ECM-917F Throttle unit
ECM-850D 5 volt power supply	ECM-9180 Accelerator pedal (AP) position sensor
ECM-8510 5 volt power supply	ECM-918A Engine control module (ECM)
ECM-851C 5 volt power supply	ECM-918F Accelerator pedal (AP) position sensor
ECM-851D 5 volt power supply	ECM-9190 Control valve inlet
ECM-8520 5 volt power supply	ECM-9190 Throttle unit
ECM-852C 5 volt power supply	ECM-919A Engine control module (ECM)
ECM-852D 5 volt power supply	ECM-91AO Control valve inlet
ECM-8700 Power supply	ECM-91A7 Throttle unit
ECM-8800 15 supply to the control module	ECM-91AC Throttle unit
ECM-880F Ignition switch	ECM-91B0 Control valve inlet
ECM-9000 Brake pedal sensor	ECM-91B7 Throttle unit
ECM-900B Brake pedal sensor	ECM-91C7 Throttle unit
ECM-900C Brake pedal sensor	ECM-91CF Engine control module (ECM)
ECM-900C Engine control module (ECM)	ECM-91DF Brake light switch
ECM-900D Brake pedal sensor	ECM-91EO Battery voltage
ECM-900E Engine control module (ECM)	ECM-91FO Throttle unit
ECM-9011 Brake pedal sensor, signal via CAN	ECM-9200 Cruise control
ECM-901A Communication control module	ECM-9200 Throttle position (TP) sensor
ECM-901B Brake pedal sensor, signal via CAN	ECM-9210 Cruise control
ECM-901D Brake pedal sensor, signal via CAN	ECM-9210 Electronic throttle unit, potentiometer 1

ECM-921C	Electronic throttle unit, potentiometer	1	ECM-9700	Accelerator pedal [AP] pos sensor
ECM-921D	Electronic throttle unit, potentiometer	1	ECM-970B	Accelerator pedal [AP] pos sensor
ECM-921F	Clutch pedal sensor		ECM-970C	Accelerator pedal [AP] pos sensor
ECM-9220	Electronic throttle unit, potentiometer	2	ECM-970D	Accelerator pedal [AP] pos sensor
ECM-922A	Cruise control		ECM-9800	ECM
ECM-922C	Cruise control		ECM-980A	Control module.
ECM-922C	Electronic throttle unit, potentiometer	2	ECM-980F	MAP sensor. Faulty signal 12
ECM-922D	Electronic throttle unit, potentiometer	2	ECM-9810	ECM, engine speed [RPM]
ECM-9240	Engine control module [ECM]		ECM-9818	Brake vacuum leakage
ECM-925C	Electronic throttle unit		ECM-981A	Control module.
ECM-925D	Electronic throttle unit		ECM-9820	ECM
ECM-926C	Electronic throttle unit		ECM-982A	Control module
ECM-926D	Electronic throttle unit		ECM-983A	Engine control module [ECM]
ECM-9270	Throttle unit		ECM-983B	Engine control module [ECM]
ECM-9280	Throttle unit		ECM-983C	Engine control module [ECM]
ECM-928C	Control module communication		ECM-983D	Engine control module [ECM]
ECM-9290	Engine control module [ECM]		ECM-9840	Engine control module [ECM]
ECM-929C	Engine control module [ECM]		ECM-984A	Engine control module [ECM]
ECM-929D	Engine control module [ECM]		ECM-984B	Engine control module [ECM]
ECM-92B0	Electronic throttle unit		ECM-9850	Engine control module [ECM]
ECM-92CC	Electronic throttle unit		ECM-985A	Engine control module [ECM]
ECM-92CD	Electronic throttle unit		ECM-985C	Engine control module [ECM]
ECM-92D0	Electronic throttle unit		ECM-9860	Engine control module [ECM]
ECM-92E0	Engine control module [ECM]		ECM-986A	Engine control module [ECM]
ECM-9300	Clutch pedal position sensor		ECM-987A	Engine control module [ECM]
ECM-930A	Clutch pedal sensor		ECM-988A	Engine control module [ECM]
ECM-930C	Clutch pedal sensor		ECM-989A	Engine control module [ECM]
ECM-930D	Control module communication		ECM-990A	Control module
ECM-930F	Clutch pedal sensor		ECM-990A	Idle air trim
ECM-9342	Engine control module [ECM]		ECM-990F	Torque monitoring
ECM-9400	Accelerator pedal [AP] pos sensor		ECM-9918	Throttle unit
ECM-9400	Brake pedal position sensor		ECM-9970	Memory fault in RAM
ECM-940A	Brake pedal position sensor		ECM-9980	Memory fault in ROM
ECM-940C	Accelerator pedal [AP] pos sensor		ECM-9990	Engine control module [ECM]
ECM-940C	Brake pedal sensor		ECM-999B	Engine control module [ECM]
ECM-940D	Accelerator pedal [AP] pos sensor		ECM-999D	Engine control module [ECM]
ECM-940F	Brake pedal sensor		ECM-9AOA	Vehicle behavior
ECM-941C	Accelerator pedal [AP] pos sensor		ECM-9AOB	Engine control module [ECM]
ECM-941C	Stop lamp switch		ECM-9AOB	Vehicle behavior
ECM-941D	Accelerator pedal [AP] pos sensor		ECM-9AOC	Engine control module [ECM]
ECM-941F	Brake pedal sensor		ECM-9AOD	Engine control module [ECM]
ECM-9430	Accelerator pedal [AP] pos sensor		ECM-A00B	Communication TCM
ECM-943B	Accelerator pedal [AP] pos sensor		ECM-A02B	Communication ABS
ECM-943C	Accelerator pedal [AP] pos sensor		ECM-A02B	Communication BCM
ECM-943D	Accelerator pedal [AP] pos sensor		ECM-A02B	Communication ABS
ECM-950A	Accelerator pedal [AP] pos sensor		ECM-A02F	Speed signal
ECM-950C	Accelerator pedal [AP] pos sensor		ECM-A038	Speed signal, front wheel pair
ECM-950F	Accelerator pedal [AP] pos sensor		ECM-A03B	Communication CEM
ECM-951C	ECM, idle air trim		ECM-A048	Speed signal, rear wheel pair
ECM-951D	ECM, idle air trim		ECM-A10B	Alternator control module [ACM]
ECM-951F	Accelerator pedal [AP] pos sensor		ECM-A10D	Alternator control module [ACM]
ECM-9520	Accelerator pedal [AP] pos sensor		ECM-A12B	Speed signal
ECM-952F	Accelerator pedal [AP] pos sensor		ECM-A12C	Speed signal
ECM-9530	Accelerator pedal [AP] pos sensor		ECM-A130	Control module communication
ECM-953F	AP pos sensor/brake light contact		ECM-A20B	Engine control module [ECM]
ECM-9540	5 volt power supply		ECM-A20C	Engine control module [ECM]
ECM-9540	Accelerator pedal [AP] pos sensor		ECM-A400	Engine control module [ECM]
ECM-958F	Accelerator pedal [AP] pos sensor		ECM-A500	Control area network (CAN) fault
ECM-959F	ETM.		ECM-A600	Additive dosage module (ADM)
ECM-9600	ECM		ECM-A610	Additive dosage module (ADM)
ECM-960C	ECM		ECM-A620	Additive dosage module (ADM)

ECM-A630 Brake control module (BCM)

ECM-A640 TCM

ECM-A660 TCM

ECM-A670 Communication TCM

ECM-A680 TCM

ECM-A690 TCM

ECM-A6A0 Ignition switch

ECM-C001 Control module communication

ECM-C002 Control module communication

ECM-C073 Control module communication

ECM-C118 Communication ADM

ECM-C121 Communication BCM

ECM-C122 Communication BCM

ECM-C131 Communication EPS

ECM-C140 Communication CEM

ECM-C155 Communication DIM

ECM-C167 Communication CEM

ECM-C168 Communication BCM

ECM-C322 Check sum error

ECM-C326 Communication control module

ECM-C400 Communication control module

ECM-C415 Communication BCM

ECM-C416 Communication BCM

ECM-C422 Communication CEM

ECM-C423 Communication DIM

ECM-C426 Communication CEM

ECM-C427 Communication BCM

ECM-D00E Front heated oxygen sensor (HO2S)

ECM-D039 Speed signal

ECM-D900 Configuration fault

ECM-E000 Communication control module

ECM-E000 Control module communication

ECM-E000 Control unit, internal fault

ECM-E003 Configuration fault

ECM-E003 Control unit, internal fault

ECM-E010 Configuration problem

ECM-E013 Configuration fault

ECM-F00D Gas pressure sensor governor

## EFI

EFI-0011 Heated oxygen sensor (HO2S)

EFI-0012 Volume air flow (VAF) sensor

EFI-0013 Intake air temperature (IAT) sensor

EFI-0014 Throttle position (TP) sensor

EFI-0021 Engine coolant temperature (ECT) sensor

EFI-0022 Engine speed (RPM) sensor

EFI-0025 Atmospheric pressure sensor

EFI-0036 Ignition adjustment signal

EFI-0041 Injection valve

EFI-0044 Ignition coil

EFI-0056 Fuel pressure sensor

EFI-0058 Abnormal intake air

EFI-0066 Brake vacuum sensor

EFI-0089 Fuel system fuel pressure

## EPS

EPS-0020 Pump motor

EPS-0021 Pump motor

EPS-0022 Control module, internal fault

EPS-0030 Temperature sensor

EPS-0040 High temperature

EPS-0041 High temperature

EPS-0050 Memory fault in ROM

EPS-0051 Memory fault in ROM

EPS-0053 Memory fault in ROM

EPS-0060 Control module

EPS-0070 Power supply

EPS-0071 Power supply

EPS-0080 Steering wheel angle sensor

EPS-0081 Speed

EPS-0082 Engine status

EPS-0083 Battery voltage

EPS-E000 CAN communication

EPS-E003 Configuration fault

## GDM

GDM-0001 Speed signal

GDM-0002 Headlamp range adjustment

GDM-0003 Angle sensor

GDM-0005 Control module

GDM-0006 Control module

GDM-0007 Control module

GDM-0008 Control module

## GPS

GPS-0001 GPS antenna

GPS-0002 GPS antenna

GPS-0003 Control module

## IAM

IAM-1001 AM/FM antenna

IAM-1002 AM/FM antenna

IAM-2001 Control module

IAM-2002 Control module

IAM-2003 Control module

IAM-2004 Control module

IAM-2005 Control module

IAM-3001 Front left speaker

IAM-3002 Front left speaker

IAM-3003 Front left speaker

IAM-3004 Front left speaker

IAM-3005 Front left speaker

IAM-3011 Front right speaker

IAM-3012 Front right speaker

IAM-3013 Front right speaker

IAM-3014 Front right speaker

IAM-3015 Front right speaker

IAM-3021 Rear left speaker

IAM-3023 Rear left speaker

IAM-3024 Rear left speaker

IAM-3025 Rear left speaker

IAM-3031 Rear right speaker

IAM-3032 Rear right speaker

IAM-3033 Rear right speaker

IAM-3034 Rear right speaker

IAM-3035 Rear right speaker

IAM-9001 Control module

IAM-9002 Control module

## ICM

ICM-1A02 Control module

ICM-1A03 Control module	KVM-0001 Receiver
ICM-1A05 Control module	KVM-0002 Receiver
ICM-1A51 Communication AUD	KVM-0003 Receiver
ICM-1A52 Communication AFM	KVM-0010 Inner antenna
ICM-1A52 Communication ATM	KVM-0011 Inner antenna
ICM-1A53 Communication MMM	KVM-0012 Inner antenna
ICM-1A54 Communication SUB	KVM-0013 Outer antenna left
ICM-1A55 Communication MP1	KVM-0014 Outer antenna left-hand
ICM-1A55 Communication MPM	KVM-0015 Outer antenna left-hand
ICM-1A56 Communication MP2	KVM-0016 Outer antenna left-hand
ICM-1A57 Communication PHM	KVM-0017 Outer antenna right-hand
ICM-1A58 Communication GPS	KVM-0018 Outer antenna right-hand
ICM-1A59 Communication TMC	KVM-0019 Outer antenna right-hand
ICM-1A5A Control module	KVM-001A Outer antenna right-hand
ICM-1D01 Control module	KVM-001B Outer antenna rear
ICM-1D03 Control module	KVM-001C Outer antenna rear
ICM-1D07 Control module	KVM-001D Outer antenna rear
ICM-1D08 Control module	KVM-001E Outer antenna rear
ICM-1D09 Control module	KVM-0020 Switch unlocking left front
ICM-1F20 Left keypad	KVM-0021 Switch unlocking right front
ICM-1F21 Left-hand keypad circuit 1	KVM-0022 Switch unlocking left rear
ICM-1F22 Left-hand keypad circuit 2	KVM-0023 Switch unlocking right rear
ICM-1F23 Left-hand keypad circuit 3	KVM-0030 Outer lock button left front
ICM-1F24 Left-hand keypad circuit 4	KVM-0031 Outer lock button right front
ICM-1F25 Right-hand keypad circuit 5	KVM-0032 Outer lock button left rear
ICM-1F26 Right keypad	KVM-0033 Outer lock button right rear
ICM-1F27 Right-hand keypad circuit 1	KVM-0040 Switch unlocking left front
ICM-1F28 Right-hand keypad circuit 2	KVM-0041 Switch unlocking right front
ICM-1F29 POWER button	KVM-0042 Switch unlocking left rear
ICM-1F30 POWER button	KVM-0043 Switch unlocking right rear
ICM-1F31 SOUND button	KVM-0050 Switch quick lock left front
ICM-1F32 VOLUME knob	KVM-0051 Switch quick lock right front
ICM-1F33 SELECTOR knob	KVM-0052 Switch quick lock left rear
ICM-1F34 VOLUME knob	KVM-0053 Switch quick lock right rear
ICM-1F35 SELECTOR knob	KVM-0060 Switch unlocking tailgate
ICM-1F36 Heating, display	KVM-0080 Control module
ICM-1F37 Display	KVM-0081 Control module
ICM-1F38 Temperature sensor	KVM-E001 Control module communication
ICM-1F40 Receiver remote control	KVM-E003 Incorrect configuration
ICM-6C70 AFM not approved	KVM-E010 Power supply
ICM-6C70 ATM not approved	
ICM-6C71 AUD not approved	
ICM-6C72 MMM not approved	
ICM-6C73 SUB not approved	
ICM-6C74 MP1 not approved	
ICM-6C74 MPM not approved	
ICM-6C75 MP2 not approved	
ICM-6C76 PHM not approved	
ICM-6C77 GPS not approved	
ICM-6C78 TMC not approved	
ICM-6C79 ICM not approved	
ICM-6C7A Control module	
ICM-9F01 Display	
ICM-DC00 Control module communication	
ICM-DC01 Control module communication	
ICM-DC02 Control module communication	
ICM-E001 Control module communication	
ICM-E003 Configuration fault	
ICM-E010 Power supply	

## KVM

## **MPM**

MPM-0002 Control module  
MPM-0003 Control module  
MPM-0004 Control module  
MPM-0005 Control module  
MPM-0006 Control module

PHM-0009 Hands-free microphone  
PHM-000A Hands-free microphone  
PHM-000B Telephone handset cradle  
PHM-000C Handset cradle  
PHM-000D Handset loudspeaker  
PHM-000D Handset microphone  
PHM-000E Carphone handset switch  
PHM-000F Handset loudspeaker

PHM-0010 Hands-free speakers  
PHM-0011 Hands-free speakers  
PHM-0012 Hands-free speakers  
PHM-0012 Handset supply  
PHM-0013 Control module  
PHM-0013 ON/OFF bulb  
PHM-0014 Carphone antenna  
PHM-0014 Carphone keypad lighting  
PHM-0015 Control module  
PHM-0015 Power supply  
PHM-0016 Control module  
PHM-0017 Communication carphone box  
PHM-0018 Carphone box power supply  
PHM-0019 Carphone box power supply  
PHM-001A Carphone box power supply  
PHM-001B Carphone handset power supply  
PHM-001C Hands-free loudspeakers  
PHM-001D Handset microphone  
PHM-001E Handset loudspeaker  
PHM-0020 Handset microphone  
PHM-0022 Handset supply  
PHM-0030 Backup battery  
PHM-0031 GPS unit

PHM-0032 GPS antenna  
PHM-0033 GPS antenna  
PHM-0034 GPS antenna  
PHM-003A Internal antenna  
PHM-0040 SIM card  
PHM-0063 Lighting switch  
PHM-0064 Lighting switch  
PHM-0065 Volvo On Call switch  
PHM-0066 Volvo On Call switch  
PHM-0067 Reserve battery, not connected  
PHM-0068 SIM card holder  
PHM-006A Communication problems MOST  
PHM-006B Control module  
PHM-006C Handset cradle  
PHM-0080 Volvo On Call switch  
PHM-0082 Volvo On Call switch  
PHM-E001 Control module communication  
PHM-E003 Configuration fault  
PHM-E010 Power supply

## **PAM**

PAM-0001 Control module  
PAM-0002 Parking sensor 1  
PAM-0003 Parking sensor 1  
PAM-0004 Parking sensor 2  
PAM-0005 Parking sensor 2  
PAM-0006 Parking sensor 3  
PAM-0007 Parking sensor 3  
PAM-0008 Parking sensor 4  
PAM-0009 Parking sensor 4  
PAM-0010 Parking sensor 5  
PAM-0011 Parking sensor 5  
PAM-0012 Parking sensor 6  
PAM-0013 Parking sensor 6  
PAM-0014 Parking sensor 7  
PAM-0015 Parking sensor 7  
PAM-0016 Parking sensor 8  
PAM-0017 Parking sensor 8  
PAM-0018 Configuration fault  
PAM-E001 Control module communication  
PAM-E003 Configuration fault  
PAM-E010 Power supply

## **PDM**

PDM-0012 Control, passenger window  
PDM-0017 Control, passenger window  
PDM-001D Central locking button  
PDM-0034 Control, passenger window  
PDM-0035 Control, passenger window  
PDM-0036 Door warning lamp  
PDM-0037 Door warning lamp  
PDM-0039 Door mirror lamp  
PDM-003A Door mirror lamp  
PDM-003C Power supply  
PDM-003E Control module  
PDM-0040 Outside temperature sensor  
PDM-0041 Outside temperature sensor  
PDM-0042 Control module  
PDM-0043 Control module  
PDM-E001 Control module communication  
PDM-E003 Configuration fault

PHM-0032 GPS antenna  
PHM-0033 GPS antenna  
PHM-0034 GPS antenna  
PHM-003A Internal antenna  
PHM-0040 SIM card  
PHM-0063 Lighting switch  
PHM-0064 Lighting switch  
PHM-0065 Volvo On Call switch  
PHM-0066 Volvo On Call switch  
PHM-0067 Reserve battery, not connected  
PHM-0068 SIM card holder  
PHM-006A Communication problems MOST  
PHM-006B Control module  
PHM-006C Handset cradle  
PHM-0080 Volvo On Call switch  
PHM-0082 Volvo On Call switch  
PHM-E001 Control module communication  
PHM-E003 Configuration fault  
PHM-E010 Power supply

## **PHM**

PHM-0001 Power supply  
PHM-0002 Hands-free speakers  
PHM-0003 Communication control module  
PHM-0004 Communication control module  
PHM-0004 Hands-free loudspeaker  
PHM-0005 Communication with control module  
PHM-0006 Carphone microphone  
PHM-0006 Hands-free loudspeaker  
PHM-0008 Communication carphone box  
PHM-0008 Hands-free microphone

PSM-0001 Hall sensor 1  
PSM-0002 Hall sensor 2  
PSM-0003 Hall sensor 3  
PSM-0004 Hall sensor 4  
PSM-0007 M1, M2, M3, M4 or MC  
PSM-0008 M1, M2, M3, M4 or MC  
PSM-0019 Memory function 1  
PSM-001A Memory function 2  
PSM-001B Memory function 3

PSM-001C Control panel	REM-4A39 Fuel level, gas
PSM-001D Control module, relay	REM-4A40 Gas temperature sensor
PSM-001E Battery voltage	REM-4A41 Gas temperature sensor
PSM-0020 Front-rear adjustment control, M1+	REM-4A42 Gas pressure sensor
PSM-0021 Front-rear adjustment control, M1-	REM-4A43 Gas pressure sensor
PSM-0022 Backrest adjustment control, M2+	REM-4A44 Fuel level, gas
PSM-0023 Backrest adjustment control, M2-	REM-4A45 Fuel level, gas
PSM-0024 Rear edge adjustment control, M3+	REM-4A46 Fuel level, gas
PSM-0025 Rear edge adjustment control, M3-	REM-4A47 Fuel level, gas
PSM-0026 Front edge adjustment control, M4+	REM-4A48 Fuel level, gas
PSM-0027 Front edge adjustment control, M4-	REM-4F41 Communication PAM
PSM-0028 Operating button, memory 1	REM-4F42 Back-up warning sensor 1
PSM-0029 Operating button, memory 2	REM-4F42 Parking sensor 1
PSM-002A Operating button, memory 3	REM-4F43 Back-up warning sensor 2
PSM-002B Memory button	REM-4F43 Parking sensor 2
PSM-002C Button combination not permissible, M1+ and M1-	REM-4F44 Back-up warning sensor 3
PSM-002D Button combination not permissible, M2+ and M2-	REM-4F44 Parking sensor 3
PSM-002E Button combination not permissible, M3+ and M3-	REM-4F45 Back-up warning sensor 4
PSM-002F Button combination not permissible, M4+ and M4-	REM-4F45 Parking sensor 4
PSM-0030 Front-rear adjustment, Motor 1 (M1+)	REM-4F46 Parking sensor 5
PSM-0031 Front-rear adjustment, Motor 1 (M1-)	REM-4F47 Parking sensor 6
PSM-0032 Backrest, Motor 2 (M2+)	REM-4F48 Parking sensor 7
PSM-0033 Backrest, Motor 2 (M2-)	REM-4F49 Parking sensor 8
PSM-0034 Seat rear edge, Motor 3 (M3+)	REM-4F4A PAM
PSM-0035 Seat rear edge, Motor 3 (M3-)	REM-4F90 Sensor, seat belt reminder
PSM-0036 Seat front edge, Motor 4 (M4+)	REM-4F91 Sensor, seat belt reminder
PSM-0037 Seat front edge, Motor 4 (M4-)	REM-4F92 Sensor, seat belt reminder
PSM-0038 Incorrect software	REM-4F93 Sensor, seat belt reminder
PSM-003A Hall sensor 1	REM-5A31 Relay, rear A/C
PSM-003B Hall sensor 2	REM-5A32 Relay, rear A/C
PSM-003C Hall sensor 3	REM-6A01 Lock relay, central locking, rear left door
PSM-003D Hall sensor 4	REM-6A02 Switch central locking motor
PSM-E001 Control module communication	REM-6A03 Lock relay, central locking, rear left door
PSM-E003 Configuration fault	REM-6A04 Switch central locking motor
PSM-E010 Control module	REM-6A04 Unlocking relay, central locking rear left door
	REM-6A05 Switch locking motor child-proof lock
	REM-6A05 Unlocking relay, central locking, rear left door
	REM-6A06 Relay, deadlock
	REM-6A06 Switch locking motor child-proof lock
	REM-6A08 Relay, deadlock
	REM-6A09 Lock relay, central locking, rear right door
	REM-6AOB Lock relay, central locking, rear right door
	REM-6AOC Unlocking relay, central locking rear right door
	REM-6AOE Unlocking relay, central locking rear right door
	REM-6A10 Door switch
	REM-6A11 Door switch
	REM-6A12 Door switch
	REM-6A13 Door switch
	REM-6A14 Hood switch
	REM-6A15 Switch, tailgate
	REM-6C11 Level sensor, power supply
	REM-6C12 Level sensor, voltage supply
	REM-6C15 Communication level sensor
	REM-6C16 Level sensor
	REM-6F11 Head rest relay
	REM-6F13 Head rest relay
	REM-6F51 Tailgate handle
	REM-6F52 Unlocking relay, central locking tailgate
	REM-6F54 Unlocking relay, central locking tailgate
	REM-6F55 Unlocking relay, central locking, tailgate
	REM-6F56 Locking relay, central locking, tailgate

## REM

REM-1A01 30-Power supply	
REM-1A02 Relay, extended power supply	
REM-1A03 Relay, extended power supply	
REM-1A04 Relay, 15l supply	
REM-1A05 Relay, 15l supply	
REM-1D01 Control module	
REM-1D02 Control module	
REM-1D03 Control module	
REM-1D07 Control module	
REM-1D08 Control module	
REM-1DOA Control module	
REM-3C01 Relay, preheating the diesel filter	
REM-3FD1 Relay, gas tank valve	
REM-3FD3 Relay, gas tank valve	
REM-4A31 Fuel gauge sensor	
REM-4A33 Fuel gauge sensor	
REM-4A34 Fuel gauge sensor	
REM-4A35 Fuel gauge sensor	
REM-4A37 Fuel gauge sensor	
REM-4A38 Fuel gauge sensor	

REM-6F71	Locking relay, central locking, fuel tank filler cover	SAS-0005	Steering wheel angle signal B
REM-6F73	Locking relay, central locking, fuel tank filler cover	SAS-0006	Steering wheel angle signal B
REM-6F74	Unlocking relay, central locking, fuel tank filler cover	SAS-0007	Steering wheel angle signal IX
REM-6F76	Unlocking relay, central locking, fuel tank filler cover	SAS-0008	Steering wheel angle signal IX
REM-8B01	Parking lamps right	SAS-0009	Steering wheel angle signal IY
REM-8B11	Parking lamps left	SAS-000A	Steering wheel angle sensor
REM-8B21	License plate lighting	SAS-000B	Control module
REM-8B22	Parking lamps	SAS-000C	Control module
REM-8C21	Rear fog lamp relay	SAS-000E	Steering wheel angle sensor
REM-8C23	Rear fog lamp relay	SAS-000F	Steering wheel angle sensor
REM-8D11	Boot lighting	SAS-0010	Steering wheel angle signal IY
REM-8D11	High level stop lamp	SAS-0011	Steering wheel pos signal R1
REM-8D12	High level stop lamp	SAS-0012	Steering wheel pos signal R1
REM-8D13	Stop lamps (LED)	SAS-0013	Steering wheel pos signal R2
REM-8D14	Stop lamps (LED)	SAS-0014	Steering wheel pos signal R2
REM-8E01	Relay, back-up (reversing) lamp	SAS-0015	Steering wheel pos signal R3
REM-8E02	Relay, back-up (reversing) lamp	SAS-0016	Steering wheel pos signal R3
REM-8E11	Relay, back-up (reversing) lamp	SAS-0017	Steering wheel pos signal R4
REM-8E13	Relay, back-up (reversing) lamp	SAS-0018	Steering wheel pos signal R4
REM-8F10	Position sensor xenon lamp	SAS-0019	Control module
REM-8F11	Xenon lamp position sensor	SAS-0020	Steering wheel angle sensor signal A/B/IX/IY
REM-8F12	Xenon lamp position sensor	SAS-0021	Steering wheel angle sensor signal R1/R2/R3/R4
REM-8F13	Bi-Xenon lamp position sensor	SAS-0022	Steering wheel angle sensor signal R1/R2/R3/R4
REM-8F41	Tailgate wiper relay	SAS-0023	Steering wheel angle sensor signal A/B/IX/IY
REM-8F43	Tailgate wiper relay	SAS-0024	Steering wheel angle sensor
REM-8F61	Rear window defroster relay	SAS-0025	Circuit for LED group 2. Signal too low
REM-8F63	Rear window defroster relay	SAS-0025	LED group 2 circuit
REM-9F21	Cargo compartment lighting	SAS-0026	LED group 2 circuit
REM-DD00	LIN communication	SAS-0041	Steering wheel angle sensor
REM-DD01	LIN communication	SAS-0042	Steering wheel angle sensor
REM-DD02	LIN communication	SAS-0044	Steering wheel angle sensor
REM-DD10	LIN communication	SAS-0045	Steering wheel angle signal A
REM-DD20	Level sensor alarm	SAS-0046	Steering wheel angle signal B
REM-DD21	Level sensor alarm	SAS-0047	Control module
REM-E001	Control module communication	SAS-0048	Control unit voltage supply
REM-E003	Configuration fault	SAS-0049	Control unit voltage supply
REM-E010	Power supply control module	SAS-004A	Control module
		SAS-004B	Steering wheel angle sensor
		SAS-E000	Control module communication
		SAS-E003	Configuration fault
		SAS-E010	Control module voltage low

## RTI

RTI-1000 Control module  
 RTI-2000 CD-ROM player reading off  
 RTI-2000 DVD player  
 RTI-2100 CD-ROM player  
 RTI-2100 DVD player  
 RTI-3000 GPS receiver  
 RTI-3100 GPS antenna  
 RTI-4000 TMC receiver missing  
 RTI-5000 FM multiplex receiver  
 RTI-E001 Control module communication  
 RTI-E003 Configuration fault

## SAS

SAS-0000 Control module voltage low  
 SAS-0001 Circuit for LED group 1  
 SAS-0002 Circuit for LED group 1  
 SAS-0003 Steering wheel angle sensor  
 SAS-0004 Steering wheel angle sensor

## SRS

SRS-0001 Control module  
 SRS-0001 SRS indicator lamp  
 SRS-0002 SRS indicator lamp  
 SRS-0003 PAD lamp  
 SRS-0004 PAD lamp  
 SRS-0005 Power supply from the battery  
 SRS-0006 Power supply from the battery  
 SRS-0010 Driver air bag, stage 1  
 SRS-0011 Driver air bag, stage 1  
 SRS-0012 Driver air bag, stage 1  
 SRS-0013 Driver air bag, stage 1  
 SRS-0014 Driver air bag stage 1  
 SRS-0015 Driver air bag, stage 1  
 SRS-0016 Driver air bag, stage 1  
 SRS-0016 Driver airbag stage 2  
 SRS-0017 Driver airbag stage 2

SRS-0018	Driver airbag stage 2	SRS-0039	Left inflatable curtain
SRS-0019	Driver airbag stage 2	SRS-0039	Passenger airbag stage 1
SRS-001A	Driver airbag stage 2	SRS-003A	Left inflatable curtain
SRS-001B	Driver's airbag stage 2	SRS-003A	Passenger airbag stage 2
SRS-001C	Driver's airbag, stage 2	SRS-003B	Left inflatable curtain
SRS-001D	Driver's seat belt tensioner	SRS-003B	Passenger airbag stage 2
SRS-001E	Driver's airbag, stage 2	SRS-003C	Left inflatable curtain
SRS-001F	Driver's seat belt tensioner	SRS-003C	Passenger airbag stage 2
SRS-0020	Driver's seat belt tensioner	SRS-003D	Left inflatable curtain
SRS-0021	Passenger air bag, stage 1	SRS-003D	Passenger airbag stage 2
SRS-0022	Driver's lap belt tensioner	SRS-003E	Left inflatable curtain
SRS-0022	Passenger air bag, stage 1	SRS-003E	Passenger airbag stage 2
SRS-0023	Driver's lap belt tensioner	SRS-0040	Front right side air bag
SRS-0023	Passenger air bag, stage 1	SRS-0040	Passenger seat belt tensioner
SRS-0024	Driver's lap belt tensioner	SRS-0041	Front right side air bag
SRS-0024	Passenger air bag, stage 1	SRS-0041	Passenger seat belt tensioner
SRS-0025	Driver's lap belt tensioner	SRS-0042	Front right side air bag
SRS-0025	Passenger air bag, stage 1	SRS-0042	Passenger seat belt tensioner
SRS-0026	Configuration fault	SRS-0043	Front right side air bag
SRS-0026	Driver's lap belt tensioner	SRS-0043	Passenger seat belt tensioner
SRS-0026	Passenger airbag, stage 1	SRS-0044	Front right side air bag
SRS-0027	Driver's lap belt tensioner	SRS-0044	Passenger seat belt tensioner
SRS-0028	Driver's seat belt force limiter	SRS-0045	Front right side air bag
SRS-0028	Passenger air bag, stage 2	SRS-0045	Passenger seat belt tensioner
SRS-0029	Driver's seat belt force limiter	SRS-0046	Right front SIPS bag
SRS-0029	Passenger air bag, stage 2	SRS-0048	Right inflatable curtain
SRS-002A	Driver's seat belt force limiter	SRS-0049	Right inflatable curtain
SRS-002A	Passenger air bag, stage 2	SRS-004A	Passenger lap belt tensioner
SRS-002B	Driver's seat belt force limiter	SRS-004A	Right inflatable curtain
SRS-002B	Passenger air bag, stage 2	SRS-004B	Passenger lap belt tensioner
SRS-002C	Driver's seat belt force limiter	SRS-004B	Right inflatable curtain
SRS-002C	Passenger air bag, stage 2	SRS-004C	Passenger seat belt force limiter
SRS-002D	Driver's seat belt force limiter	SRS-004C	Right inflatable curtain
SRS-002D	Passenger air bag, stage 2	SRS-004D	Passenger seat belt force limiter
SRS-002E	Adaptive steering column	SRS-004D	Right inflatable curtain
SRS-002E	Configuration fault	SRS-004E	Passenger seat belt force limiter
SRS-002E	Passenger airbag, stage 2	SRS-004E	Right inflatable curtain
SRS-002F	Adaptive steering column	SRS-004F	Passenger seat belt force limiter
SRS-0030	Adaptive steering column	SRS-0050	Passenger airbag stage 3
SRS-0030	Front left side air bag	SRS-0050	Passenger seat belt force limiter
SRS-0031	Adaptive steering column	SRS-0051	Passenger airbag, stage 3
SRS-0031	Front left side air bag	SRS-0051	Passenger seat belt force limiter
SRS-0032	Adaptive steering column	SRS-0052	Front left SIPS bag
SRS-0032	Front left side air bag	SRS-0052	Passenger airbag, stage 3
SRS-0033	Adaptive steering column	SRS-0053	Front left SIPS bag
SRS-0033	Front left side air bag	SRS-0053	Passenger airbag, stage 3
SRS-0034	Front left side air bag	SRS-0054	Front left SIPS bag
SRS-0034	Passenger airbag stage 1	SRS-0054	Passenger airbag, stage 3
SRS-0035	Front left side air bag	SRS-0055	Front left SIPS bag
SRS-0035	Passenger airbag stage 1	SRS-0055	Passenger airbag, stage 3
SRS-0036	Configuration fault	SRS-0056	Front left seat belt tensioner
SRS-0036	Left front SIPS bag	SRS-0056	Front left SIPS bag
SRS-0036	Passenger airbag stage 1	SRS-0056	Passenger airbag, stage 3
SRS-0037	Passenger airbag stage 1	SRS-0057	Front left SIPS bag
SRS-0038	Left inflatable curtain	SRS-0058	Driver airbag, stage 3
SRS-0038	Passenger airbag stage 1	SRS-0058	Front right SIPS bag

SRS-005B Driver's airbag, stage 3	SRS-0076 Right SIPS bag
SRS-005B Front right-hand SIPS bag	SRS-0077 Rear right-hand seat belt tensioner
SRS-005C Driver's airbag, stage 3	SRS-0077 Right SIPS bag
SRS-005C Front right-hand SIPS bag	SRS-0078 Driver Airbag
SRS-005D Driver's airbag, stage 3	SRS-0078 Rear center seat belt tensioner
SRS-005D Front right-hand SIPS bag	SRS-0078 Rear right-hand seat belt tensioner
SRS-005E Driver's airbag stage 3	SRS-0079 Driver Airbag
SRS-005E Front right seat belt tensioner	SRS-0079 Rear center seat belt tensioner
SRS-005E Left-hand inflatable curtain	SRS-0079 Rear right-hand seat belt tensioner
SRS-005F Left-hand inflatable curtain	SRS-007A Driver's seat belt tensioner
SRS-0060 Front left seat belt tensioner	SRS-007A Rear center seat belt tensioner
SRS-0060 Left-hand inflatable curtain	SRS-007A Rear right-hand seat belt tensioner
SRS-0061 Front left seat belt tensioner	SRS-007B Driver's seat belt tensioner
SRS-0061 Left-hand inflatable curtain	SRS-007B Rear center seat belt tensioner
SRS-0062 Front left seat belt tensioner	SRS-007B Rear right-hand seat belt tensioner
SRS-0062 Left-hand inflatable curtain	SRS-007C Passenger seat belt tensioner
SRS-0063 Front left seat belt tensioner	SRS-007C Rear center seat belt tensioner
SRS-0063 Left-hand inflatable curtain	SRS-007D Passenger seat belt tensioner
SRS-0064 Front left seat belt tensioner	SRS-007D Rear center seat belt tensioner
SRS-0064 Right-hand inflatable curtain	SRS-007E Passenger airbag
SRS-0065 Front left seat belt tensioner	SRS-007E Rear center seat belt tensioner
SRS-0065 Right-hand inflatable curtain	SRS-007F Passenger airbag
SRS-0065 SRS indicator lamp	SRS-0080 Rear right seat belt tensioner
SRS-0066 Front left seat belt tensioner	SRS-0081 Rear right seat belt tensioner
SRS-0066 Right-hand inflatable curtain	SRS-0082 Rear right seat belt tensioner
SRS-0066 SRS indicator lamp	SRS-0083 Rear right seat belt tensioner
SRS-0067 Battery voltage	SRS-0084 Left SIPS bag
SRS-0067 Right-hand inflatable curtain	SRS-0084 Rear right seat belt tensioner
SRS-0068 Driver Airbag	SRS-0085 Left SIPS bag
SRS-0068 Front right seat belt tensioner	SRS-0085 Rear right seat belt tensioner
SRS-0068 Right-hand inflatable curtain	SRS-0086 Rear right seat belt tensioner
SRS-0069 Driver Airbag	SRS-0086 Right SIPS bag
SRS-0069 Front right seat belt tensioner	SRS-0087 Right SIPS bag
SRS-0069 Right-hand inflatable curtain	SRS-0088 Driver's airbag
SRS-006A Driver's seat belt tensioner	SRS-0089 Driver's seat belt tensioner
SRS-006A Front right seat belt tensioner	SRS-008A Passenger seat belt tensioner
SRS-006A Rear left-hand seat belt tensioner	SRS-008B Passenger airbag
SRS-006B Driver's seat belt tensioner	SRS-008E Left SIPS airbag
SRS-006B Front right seat belt tensioner	SRS-0090 Driver's seat belt buckle
SRS-006B Rear left-hand seat belt tensioner	SRS-0090 Seat belt tensioner 3rd row left
SRS-006C Front right seat belt tensioner	SRS-0091 Driver's seat belt buckle
SRS-006C Passenger seat belt tensioner	SRS-0091 Seat belt tensioner 3rd row left
SRS-006C Rear left-hand seat belt tensioner	SRS-0092 Driver's seat belt buckle
SRS-006D Front right seat belt tensioner	SRS-0092 Seat belt tensioner 3rd row left
SRS-006D Passenger seat belt tensioner	SRS-0093 Driver's seat belt buckle
SRS-006D Rear left-hand seat belt tensioner	SRS-0093 Passenger seat belt buckle
SRS-006E Front right seat belt tensioner	SRS-0093 Seat belt tensioner 3rd row left
SRS-006E Passenger airbag	SRS-0094 Passenger seat belt buckle
SRS-006E Rear left-hand seat belt tensioner	SRS-0094 Seat belt tensioner 3rd row left
SRS-006F Passenger airbag	SRS-0095 Passenger seat belt buckle
SRS-006F Rear left-hand seat belt tensioner	SRS-0095 Seat belt tensioner 3rd row left
SRS-0070 Rear left seat belt tensioner	SRS-0096 Driver's seat belt buckle
SRS-0071 Rear left seat belt tensioner	SRS-0096 Passenger seat belt buckle
SRS-0072 Rear left seat belt tensioner	SRS-0096 Seat belt tensioner 3rd row left
SRS-0073 Rear left seat belt tensioner	SRS-0097 Passenger seat belt buckle
SRS-0074 Left SIPS bag	SRS-0098 Seat belt tensioner 3rd row right
SRS-0074 Rear left seat belt tensioner	SRS-0099 Seat belt tensioner 3rd row right
SRS-0075 Left SIPS bag	SRS-009A Rear seat belt buckle
SRS-0075 Rear left seat belt tensioner	SRS-009A Seat belt tensioner 3rd row right
SRS-0076 Rear left seat belt tensioner	SRS-009B Rear seat belt buckles
SRS-0076 Rear right-hand seat belt tensioner	SRS-009B Seat belt tensioner 3rd row right

SRS-009C	Driver's seat position sensor	SRS-00C3	Front right side impact sensor
SRS-009C	Seat belt tensioner 3rd row right	SRS-00C3	Rear right side impact sensor
SRS-009D	Driver's seat position sensor	SRS-00C4	Front left side impact sensor
SRS-009D	Seat belt tensioner 3rd row right	SRS-00C4	Front right side impact sensor
SRS-009E	Driver's seat position sensor	SRS-00C5	Front right side impact sensor
SRS-009E	Seat belt tensioner 3rd row right	SRS-00C6	Front right side impact sensor
SRS-009F	Driver's seat position sensor	SRS-00C6	Rear left side impact sensor
SRS-00AO	Left rear inflatable curtain	SRS-00C7	Control module
SRS-00AO	Left side impact sensor	SRS-00C7	Front right side impact sensor
SRS-00AO	Passenger seat position sensor	SRS-00C7	Rear right side impact sensor
SRS-00A1	Left rear inflatable curtain	SRS-00CB	Rear right side impact sensor
SRS-00A1	Left side impact sensor	SRS-00CC	Rear right side impact sensor
SRS-00A1	Passenger seat position sensor	SRS-00CD	Rear right side impact sensor
SRS-00A2	Left rear inflatable curtain	SRS-00CE	Rear right side impact sensor
SRS-00A2	Passenger seat position sensor	SRS-00CF	Rear right side impact sensor
SRS-00A2	Right side impact sensor	SRS-00DO	Driver's seat belt buckle
SRS-00A3	Left rear inflatable curtain	SRS-00DO	Rear right side impact sensor
SRS-00A3	Passenger seat position sensor	SRS-00D1	Passenger seat belt buckle
SRS-00A3	Right side impact sensor	SRS-00D3	Collision signal
SRS-00A4	Left rear inflatable curtain	SRS-00D4	Front left front impact sensor
SRS-00A4	Left side impact sensor	SRS-00D4	SRS indicator lamp
SRS-00A4	Switch for airbag in On position	SRS-00D5	Front left front impact sensor
SRS-00A5	Left rear inflatable curtain	SRS-00D5	SRS indicator lamp
SRS-00A5	Right side impact sensor	SRS-00D6	Front left front impact sensor
SRS-00A5	Switch for airbag in On position	SRS-00D6	Front seat belt buckle
SRS-00A6	Left rear inflatable curtain	SRS-00D7	Collision signal
SRS-00A6	Switch for airbag in On position	SRS-00D7	Front left front impact sensor
SRS-00A7	Switch for airbag in On/Off position	SRS-00D8	Control
SRS-00A8	Right rear inflatable curtain	SRS-00D8	Front left front impact sensor
SRS-00A8	Switch for airbag in Off position	SRS-00D9	Front left front impact sensor
SRS-00A9	Right rear inflatable curtain	SRS-00D9	Occupant weight sensor
SRS-00A9	Switch for airbag in Off position	SRS-00D9	Switch. Faulty function
SRS-00AA	Right rear inflatable curtain	SRS-00DA	Model. Faulty signal
SRS-00AA	Switch for airbag in Off position	SRS-00DB	Passenger airbag
SRS-00AB	Right rear inflatable curtain	SRS-00DC	Number of seats
SRS-00AB	Switch for passenger airbag	SRS-00DD	CAN signal
SRS-00AC	Right rear inflatable curtain	SRS-00DD	Front right front impact sensor
SRS-00AD	Right rear inflatable curtain	SRS-00DE	Front right front impact sensor
SRS-00AE	Right rear inflatable curtain	SRS-00DF	Front right front impact sensor
SRS-00BO	Front left side impact sensor	SRS-00EO	Front right front impact sensor
SRS-00B1	Front left side impact sensor	SRS-00E1	Front right front impact sensor
SRS-00B2	Front left side impact sensor	SRS-00E2	CAN signal
SRS-00B3	Front left side impact sensor	SRS-00E2	Front right front impact sensor
SRS-00B4	Front left side impact sensor	SRS-00E3	CAN signal
SRS-00B5	Front left side impact sensor	SRS-00E4	CAN signal
SRS-00B5	Front right side impact sensor	SRS-00E5	CAN signal
SRS-00B6	Front right side impact sensor	SRS-00E6	CAN signal
SRS-00B7	Front right side impact sensor	SRS-00E6	Driver's seat belt (inertia) reel sensor
SRS-00B8	Front right side impact sensor	SRS-00E7	CAN signal
SRS-00B9	Front right side impact sensor	SRS-00E7	Driver's seat belt (inertia) reel sensor
SRS-00B9	Rear left side impact sensor	SRS-00E8	Driver's seat belt (inertia) reel sensor
SRS-00BA	Rear left side impact sensor	SRS-00E8	Steering column
SRS-00BB	Rear left side impact sensor	SRS-00E9	Driver's seat belt (inertia) reel sensor
SRS-00BC	Rear left side impact sensor	SRS-00E9	Steering column
SRS-00BD	Rear left side impact sensor	SRS-00EA	Driver's seat belt (inertia) reel sensor
SRS-00BE	Rear left side impact sensor	SRS-00EA	Steering column
SRS-00BF	Rear right side impact sensor	SRS-00EB	Driver's seat belt (inertia) reel sensor
SRS-00CO	Rear right side impact sensor	SRS-00EB	Steering column
SRS-00C1	Rear right side impact sensor	SRS-00EC	Driver's seat belt (inertia) reel sensor
SRS-00C2	Front right side impact sensor	SRS-00EC	Steering column
SRS-00C2	Rear right side impact sensor	SRS-00ED	Driver's seat belt (inertia) reel sensor

SRS-00ED Steering column	SRS-0112 Occupant weight sensor [OWS]
SRS-00EE Steering column	SRS-0112 Passenger seat belt tensioner
SRS-00EF Passenger seat belt [inertia] reel sensor	SRS-0113 Control module
SRS-00FO Front left seat belt buckle	SRS-0113 Occupant weight sensor [OWS]
SRS-00FO Passenger seat belt [inertia] reel sensor	SRS-0113 Passenger seat belt tensioner
SRS-00F1 Front left seat belt buckle	SRS-0114 Control module
SRS-00F1 Passenger seat belt [inertia] reel sensor	SRS-0114 Occupant weight sensor [OWS]
SRS-00F2 Front left seat belt buckle	SRS-0114 Passenger seat belt tensioner
SRS-00F2 Passenger seat belt [inertia] reel sensor	SRS-0115 Control module
SRS-00F3 Front right seat belt buckle	SRS-0115 Occupant weight sensor [OWS]
SRS-00F3 Passenger seat belt [inertia] reel sensor	SRS-0115 Passenger seat belt tensioner
SRS-00F4 Front right seat belt buckle	SRS-0116 Control unit
SRS-00F4 Passenger seat belt [inertia] reel sensor	SRS-0116 Occupant weight sensor [OWS]
SRS-00F5 Front right seat belt buckle	SRS-0116 Passenger airbag, stage 1
SRS-00F5 Passenger seat belt [inertia] reel sensor	SRS-0117 Control unit
SRS-00F6 Front seat belt buckle	SRS-0117 Passenger airbag, stage 1
SRS-00F6 Passenger seat belt [inertia] reel sensor	SRS-0118 Control unit
SRS-00F7 Front seat belt buckle	SRS-0118 Occupant weight sensor [OWS]
SRS-00F8 Rear right seat belt buckle	SRS-0118 Passenger airbag, stage 1
SRS-00F9 Rear center seat belt buckle	SRS-0119 Control unit
SRS-00FA Rear left seat belt buckle	SRS-0119 Passenger airbag, stage 1
SRS-00FB Rear seat belt buckle	SRS-011A Control module
SRS-00FC Seat belt buckle 3rd row, left	SRS-011A Passenger airbag, stage 1
SRS-00FD Seat belt buckle 3rd row right	SRS-011B Control module
SRS-0101 Control module	SRS-011B Passenger airbag, stage 1
SRS-0101 SRS indicator lamp	SRS-011C Control module
SRS-0102 Control module	SRS-011C Driver airbag, stage 2
SRS-0102 SRS indicator lamp	SRS-011D Control module
SRS-0103 Battery voltage	SRS-011D Driver airbag, stage 2
SRS-0103 Control modul	SRS-011E Control module
SRS-0104 Control module	SRS-011E Driver airbag, stage 2
SRS-0104 Driver airbag, stage 1	SRS-011F Control module
SRS-0105 Control module	SRS-011F Driver airbag, stage 2
SRS-0105 Driver airbag, stage 1	SRS-0120 Control module
SRS-0106 Control module	SRS-0120 Driver airbag, stage 2
SRS-0106 Driver airbag, stage 1	SRS-0120 Local CAN network, SRS
SRS-0107 Control module	SRS-0121 Control module
SRS-0107 Driver airbag, stage 1	SRS-0121 Driver airbag, stage 2
SRS-0108 Control module	SRS-0122 Control module
SRS-0108 Driver airbag, stage 1	SRS-0122 Left inflatable curtain
SRS-0109 Control module	SRS-0123 Control module
SRS-0109 Driver airbag, stage 1	SRS-0123 Left inflatable curtain
SRS-010A Control module	SRS-0124 Control module
SRS-010A Driver's side seat belt tensioner	SRS-0124 Left inflatable curtain
SRS-010B Control module	SRS-0125 Control module
SRS-010B Driver's side seat belt tensioner	SRS-0125 Left inflatable curtain
SRS-010C Control module	SRS-0126 Control module
SRS-010C Driver's side seat belt tensioner	SRS-0126 Left inflatable curtain
SRS-010D Control module	SRS-0126 Local CAN network, SRS
SRS-010D Driver's side seat belt tensioner	SRS-0127 Control module
SRS-010E Control module	SRS-0127 Left inflatable curtain
SRS-010E Driver's side seat belt tensioner	SRS-0128 CAN signal
SRS-010F Control module	SRS-0128 Control module
SRS-010F Driver's side seat belt tensioner	SRS-0128 Right inflatable curtain
SRS-0110 Control module	SRS-0129 CAN signal
SRS-0110 Occupant weight sensor [OWS]	SRS-0129 Control module
SRS-0110 Passenger seat belt tensioner	SRS-0129 Right inflatable curtain
SRS-0111 Control module	SRS-012A CAN signal
SRS-0111 Occupant weight sensor [OWS]	SRS-012A Control unit
SRS-0111 Passenger seat belt tensioner	SRS-012A Right inflatable curtain
SRS-0112 Control module	SRS-012B CAN signal

SRS-012B Control module	SRS-016B Right rear side impact sensor
SRS-012B Right inflatable curtain	SRS-017A Seat belt reminder
SRS-012C CAN signal	SRS-017C Central locking
SRS-012C Control module	SRS-017D Seat belt reminder
SRS-012C Right inflatable curtain	SRS-017E Control module
SRS-012D Right inflatable curtain	SRS-020C AOS
SRS-012E Passenger airbag, stage 2	SRS-0210 Front right front impact sensor
SRS-012F Passenger airbag, stage 2	SRS-0211 Front right front impact sensor
SRS-0130 Control module	SRS-0212 Front right front impact sensor
SRS-0130 Passenger airbag, stage 2	SRS-0213 Front right front impact sensor
SRS-0131 Control module	SRS-0214 Front right front impact sensor
SRS-0131 Passenger airbag, stage 2	SRS-0215 Front right front impact sensor
SRS-0132 Control module	SRS-0218 Front left front impact sensor
SRS-0132 Passenger airbag, stage 2	SRS-0219 Front left front impact sensor
SRS-0133 Control module	SRS-021A Front left front impact sensor
SRS-0133 Passenger airbag, stage 2	SRS-021B Front left front impact sensor
SRS-0134 Right SIPS bag	SRS-021C Front left front impact sensor
SRS-0135 Control module	SRS-021D Front left front impact sensor
SRS-0135 Right SIPS bag.	SRS-0220 CAN signal
SRS-0136 Control module	SRS-0221 CAN signal
SRS-0136 Right SIPS bag	SRS-0222 CAN signal
SRS-0137 Control module	SRS-0223 CAN signal
SRS-0137 Right SIPS bag	SRS-0224 CAN signal
SRS-0138 Control module	SRS-0225 CAN signal
SRS-0138 Right SIPS bag	SRS-0228 Control module
SRS-0139 Control module	SRS-0230 Switch for the passenger airbag
SRS-0139 Right SIPS bag	SRS-0231 Switch for the passenger airbag
SRS-013A Collision signal	SRS-0232 Switch for the passenger airbag
SRS-013A Control module	SRS-0233 Switch for the passenger airbag
SRS-013A Left SIPS bag	SRS-0234 Switch for the passenger airbag
SRS-013B Control module	SRS-0235 Switch for the passenger airbag
SRS-013B Left SIPS bag	SRS-0236 Switch for the passenger airbag
SRS-013C Left SIPS bag	SRS-0237 Switch for the passenger airbag
SRS-013D Left SIPS bag	SRS-0238 Switch for the passenger airbag
SRS-013E Left SIPS bag	SRS-0239 Switch for the passenger airbag
SRS-013F Left SIPS bag	SRS-023A Switch for the passenger airbag
SRS-014A Weight sensor/Passenger airbag switch	SRS-0240 Passenger airbag
SRS-014B Force limiter/lap tensioner	SRS-0241 Passenger airbag
SRS-0154 Driver's seat belt buckle	SRS-0250 Occupant weight sensor (OWS)
SRS-0155 Driver's seat belt buckle	SRS-0251 Occupant weight sensor (OWS)
SRS-0156 Driver's seat belt buckle	SRS-0252 Occupant weight sensor (OWS)
SRS-0157 Driver's seat belt buckle	SRS-0253 Occupant weight sensor (OWS)
SRS-0158 Passenger seat belt buckle	SRS-0254 Occupant weight sensor (OWS)
SRS-0159 Passenger seat belt buckle	SRS-0256 Occupant weight sensor (OWS)
SRS-015A Passenger seat belt buckle	SRS-0258 Occupant weight sensor (OWS)
SRS-015B Passenger seat belt buckle	SRS-025A Occupant weight sensor (OWS)
SRS-015C Left front side impact sensor	SRS-025B Occupant weight sensor (OWS)
SRS-015D Left front side impact sensor	SRS-025C Occupant weight sensor (OWS)
SRS-015E Left front side impact sensor	SRS-025D Occupant weight sensor (OWS)
SRS-015F Left front side impact sensor	SRS-025E Occupant weight sensor (OWS)
SRS-0160 Right front side impact sensor	SRS-025F Occupant weight sensor (OWS)
SRS-0161 Right front side impact sensor	SRS-0260 Occupant weight sensor (OWS)
SRS-0162 Right front side impact sensor	SRS-0262 Occupant weight sensor (OWS)
SRS-0163 Right front side impact sensor	SRS-CFFF Control module
SRS-0164 Rear left side impact sensor	SRS-DD00 Control module communication
SRS-0165 Rear left side impact sensor	SRS-DD01 Communication control module
SRS-0166 Rear left side impact sensor	SRS-DD02 Communication control module
SRS-0167 Rear left side impact sensor	SRS-DD10 Communication control module
SRS-0168 Right rear side impact sensor	SRS-E001 Control module communication
SRS-0169 Right rear side impact sensor	SRS-E003 Configuration fault
SRS-016A Right rear side impact sensor	SRS-E010 Power supply

## **SUB**

SUB-0001 Control module  
SUB-0002 Control module  
SUB-0003 Control module  
SUB-0004 Control module  
SUB-0005 Control module  
SUB-0006 Control module

## **SUM**

SUM-0011 Accel sensor, suspension left front  
SUM-0012 Accel sensor, suspension left front  
SUM-0013 Accel sensor, suspension left front  
SUM-0021 Accel sensor, suspension right front  
SUM-0022 Accel sensor, suspension right front  
SUM-0023 Accel sensor, suspension right front  
SUM-0031 Position sensor, suspension left rear  
SUM-0032 Position sensor, suspension left rear  
SUM-0033 Position sensor, suspension left rear  
SUM-0041 Position sensor, suspension right rear  
SUM-0042 Position sensor, suspension right rear  
SUM-0043 Position sensor, suspension right rear  
SUM-0051 Bodywork accel sensor body, left front  
SUM-0052 Bodywork accel sensor body, left front  
SUM-0053 Bodywork accel sensor, left front  
SUM-0061 Bodywork accel sensor, right front  
SUM-0062 Bodywork accel sensor, right front  
SUM-0063 Bodywork accel sensor, right front  
SUM-0071 Bodywork accel sensor body, left rear  
SUM-0072 Bodywork accel sensor body, left rear  
SUM-0073 Bodywork accel sensor body, left rear  
SUM-0081 Supply, sensor  
SUM-0082 Supply, sensor  
SUM-0091 Supply, sensor  
SUM-0092 Supply, sensor  
SUM-0111 Solenoid, suspension left front  
SUM-0112 Solenoid, suspension left front  
SUM-0113 Solenoid, suspension left front  
SUM-0115 Solenoid, suspension left front  
SUM-0116 Solenoid, suspension left front  
SUM-0117 Solenoid, suspension left front  
SUM-0118 Solenoid, suspension left front  
SUM-0121 Solenoid, suspension right front  
SUM-0122 Solenoid, suspension right front  
SUM-0123 Solenoid, suspension right front  
SUM-0128 Solenoid, suspension right front  
SUM-0131 Solenoid, suspension left rear  
SUM-0132 Solenoid, suspension left rear  
SUM-0133 Solenoid, suspension left rear  
SUM-0135 Solenoid, suspension left rear  
SUM-0136 Solenoid, suspension left rear  
SUM-0137 Solenoid, suspension left rear  
SUM-0138 Solenoid, suspension left rear  
SUM-0141 Solenoid, suspension right rear  
SUM-0142 Solenoid, suspension right rear  
SUM-0143 Solenoid, suspension right rear  
SUM-0145 Solenoid, suspension right rear  
SUM-0146 Solenoid, suspension right rear  
SUM-0147 Solenoid, suspension right rear  
SUM-0148 Solenoid, suspension right rear  
SUM-0151 Keypad

SUM-0152 Keypad

SUM-0153 Keypad

SUM-0171 Keypad, COMFORT indication

SUM-0172 Keypad, COMFORT indication

SUM-0181 Keypad, SPORT indication

SUM-0182 Keypad, SPORT indication

SUM-0191 Keypad, ADVANCED indication

SUM-0192 Keypad, ADVANCED indication

SUM-0201 Control module

SUM-0202 Control module

SUM-0203 Control module

SUM-0204 Control module

SUM-0205 Control module

SUM-0206 Control module

SUM-0207 Control module

SUM-0208 Control module

SUM-0209 Control module

SUM-0211 Control module

SUM-0212 Control module

SUM-0213 Control module

SUM-0220 Position sensor, calibrating

SUM-0221 Position sensor, calibrating

SUM-0222 Solenoids, calibrating

SUM-0223 Solenoids, calibrating

SUM-0230 Control module

SUM-0243 Control module

SUM-0244 Control module

SUM-0245 Control module

SUM-0246 Control module

SUM-0251 Control module

SUM-0261 Control module

SUM-0262 Control module

SUM-0263 Control module

SUM-0322 Communication CEM

SUM-0324 Communication BCM

SUM-0326 Communication ECM

SUM-0327 Communication SAS

SUM-0328 Communication CCM

SUM-0332 Communication CEM

SUM-0334 Communication BCM

SUM-0336 Communication ECM

SUM-0337 Communication SAS

SUM-E000 Control module communication

SUM-E003 Control module communication

## **SWM**

SWM-0001 Reset button

SWM-0002 Read button

SWM-0003 Headlamp flash

SWM-0004 Indicator lever

SWM-0004 Turn signal lamp stalk

SWM-0005 Windshield wiper lever

SWM-0006 Rain sensor button

SWM-0008 Communication steering wheel buttons

SWM-0009 Communication steering wheel buttons

SWM-000A Communication steering wheel buttons

SWM-000B Windscreen-wiper lever

SWM-000C Windscreen-wiper lever

SWM-000D Windscreen-wiper lever

SWM-000E Windshield wiper lever

SWM-000F Windshield wiper lever

SWM-0010 Resume and Cancel buttons  
 SWM-0011 Set+ and Set- buttons  
 SWM-0012 Search+ and Search- buttons  
 SWM-0013 Volume+ and Volume- buttons  
 SWM-0014 RTI multi-button  
 SWM-0016 Cruise control ON/OFF button  
 SWM-0017 Cruise control Resume button  
 SWM-0018 Cruise control Cancel button  
 SWM-0019 Cruise control Set+ button  
 SWM-001A Cruise control Set- button  
 SWM-001B Carphone YES-button  
 SWM-001C Carphone NO button  
 SWM-001D Volume+ button  
 SWM-001E Volume- button  
 SWM-0020 Scan+ button  
 SWM-0021 Scan- button  
 SWM-0022 RTI Enter button  
 SWM-0023 RTI Reset button  
 SWM-0024 RTI Up button  
 SWM-0025 RTI Down button  
 SWM-0026 RTI Left button  
 SWM-0027 RTI Right button  
 SWM-0028 Switch unit  
 SWM-0029 Switch unit  
 SWM-002A Switch unit  
 SWM-002B Switch unit  
 SWM-0031 Cruise control  
 SWM-0032 Cruise control  
 SWM-0033 Steering wheel angle sensor  
 SWM-0200 Steering wheel angle sensor  
 SWM-0201 Steering wheel angle sensor  
 SWM-0202 Steering wheel angle sensor  
 SWM-0203 Steering wheel angle sensor  
 SWM-0204 Steering wheel angle sensor  
 SWM-0206 Steering wheel module (SWM)  
 SWM-0207 Steering wheel module (SWM)  
 SWM-0208 Steering wheel module (SWM)  
 SWM-0209 Steering wheel module (SWM)  
 SWM-020A Steering wheel module (SWM)  
 SWM-OA01 Steering wheel module (SWM)  
 SWM-OA03 Rear windshield wiper  
 SWM-OA04 Rear windshield wiper  
 SWM-OA06 Cruise control  
 SWM-OA07 Reset button  
 SWM-OA08 Reset button  
 SWM-OA09 Rain sensor button  
 SWM-OAOA Rain sensor  
 SWM-OAOB Steering wheel switch right (SWSR)  
 SWM-OAOC Steering wheel switches  
 SWM-OAOD Steering wheel switches  
 SWM-OA10 Communication control modules  
 SWM-OA11 Communication control modules  
 SWM-OA12 Communication control modules  
 SWM-DD00 Communication control modules  
 SWM-DD01 Communication control modules  
 SWM-DD02 Communication control modules  
 SWM-DD10 Communication control modules  
 SWM-DD11 Communication control modules  
 SWM-E001 Communication control module  
 SWM-E003 Configuration fault  
 SWM-E010 Steering wheel module (SWM)

## TCM

TCM-0001 Gear shift solenoid S1  
 TCM-0002 Gear shift solenoid S1  
 TCM-0003 Gear shift solenoid S1  
 TCM-0007 Gear shift solenoid S2  
 TCM-0008 Gear shift solenoid S2  
 TCM-0009 Gear shift solenoid S2  
 TCM-000B Shift solenoid S1  
 TCM-000C Shift solenoid S2  
 TCM-000D Line pressure solenoid STH  
 TCM-000F Line pressure solenoid STH  
 TCM-0010 Line pressure solenoid STH  
 TCM-0012 Lock-up solenoid SL  
 TCM-0013 Lock-up solenoid SL  
 TCM-0014 Lock-up solenoid SL  
 TCM-0015 Lock-up solenoid SL  
 TCM-0016 Control module  
 TCM-001C Kickdown switch (KD)  
 TCM-001E Transmission output speed sensor  
 TCM-001F Speed sensor. No signal  
 TCM-001F Transmission output speed sensor  
 TCM-001F Vehicle speed sensor (VSS)  
 TCM-0020 Transmission output speed sensor  
 TCM-0020 Vehicle speed sensor (VSS)  
 TCM-0022 Transmission speed sensor  
 TCM-0023 Engine speed (RPM) sensor  
 TCM-0023 Transmission input speed sensor  
 TCM-0023 Vehicle speed sensor  
 TCM-0024 Engine speed (RPM) sensor  
 TCM-0024 Tachometer sensor  
 TCM-0024 Transmission input speed sensor  
 TCM-0027 Back-up (reverse) gear  
 TCM-0028 1st gear  
 TCM-0029 2nd gear  
 TCM-002A 3rd gear  
 TCM-002B 4th gear  
 TCM-002C 5th gear  
 TCM-002E Lock-up function  
 TCM-002F Lock-up function  
 TCM-0036 Winter mode selector switch  
 TCM-0039 Gear position sensor  
 TCM-0042 Counter, oil quality  
 TCM-0042 Oil temperature  
 TCM-0043 Oil temperature sensor  
 TCM-0044 Oil temperature sensor  
 TCM-0045 Oil temperature sensor  
 TCM-0046 Oil temperature sensor  
 TCM-0048 Control module  
 TCM-0049 Control module  
 TCM-0050 Solenoid SL  
 TCM-0051 Solenoid SL  
 TCM-0052 Solenoid SL  
 TCM-0053 Lock-up pressure switch  
 TCM-0054 Lock-up pressure switch  
 TCM-0060 Control module  
 TCM-0061 Control unit  
 TCM-0062 Control unit  
 TCM-0070 Function, immobilizer  
 TCM-0071 Function, immobilizer  
 TCM-0075 Function, Shift-lock

TCM-0076 Function, Shift-lock	TCM-012C Neutral check
TCM-0081 Speed sensor	TCM-0190 Gear selector module (GSM)
TCM-0081 Transmission output speed sensor	TCM-0191 Gear selector module (GSM)
TCM-0081 Vehicle speed sensor (VSS)	TCM-0192 Gear selector module (GSM)
TCM-0082 Transmission output speed sensor	TCM-0194 Gear selector module (GSM)
TCM-0083 Speed sensor	TCM-019B Gear selector module (GSM)
TCM-0083 Transmission output speed sensor	TCM-019C Gear selector module (GSM)
TCM-0083 Vehicle speed sensor (VSS)	TCM-0212 Shift solenoid S3
TCM-0087 Engine speed (RPM) sensor	TCM-0286 Hall sensor in gear selector
TCM-0087 Tachometer sensor	TCM-0287 Hall sensor in the gear selector
TCM-0087 Transmission input speed sensor	TCM-0291 Hall sensor in the gear selector
TCM-0088 Transmission speed sensor	TCM-0292 Hall sensor in the gear selector
TCM-0089 Engine speed (RPM) sensor	TCM-029A Transmission control module TCM
TCM-0089 Tachometer sensor	TCM-0350 Transmission
TCM-0089 Transmission input speed sensor	TCM-OA01 Communication control module
TCM-008D Lock-up pressure switch	TCM-OA11 Gear position sensor
TCM-0090 P position lock solenoid	TCM-OA12 Gear position sensor
TCM-0091 P position lock solenoid	TCM-OA30 Communication control module
TCM-0092 P position lock solenoid	TCM-OA31 Communication control module
TCM-0093 Communication gear lever control unit	TCM-DD00 Control module communication
TCM-0094 Communication gear lever control unit	TCM-DD01 Communication control module
TCM-0095 Communication gear lever control unit	TCM-DD02 Communication control module
TCM-0096 Gear selector module (GSM)	TCM-DF10 Communication control module
TCM-0096 Quickshift sensor	TCM-DF13 Control module communication
TCM-0097 Faulty software	TCM-DF14 Control module communication
TCM-0098 Faulty software	TCM-DF15 Control module communication
TCM-0099 Transmission control module (TCM)	TCM-DF16 Control module communication
TCM-009A Battery voltage	TCM-DF18 Control module communication
TCM-009B Power supply	TCM-E000 Control module communication
TCM-0100 Ctrl module. Poor gear shifting quality	TCM-E003 Configuration fault
TCM-0100 Transmission	TCM-E003 Control module communication
TCM-0101 Gear shift solenoid S3	TCM-E010 Power supply
TCM-0102 Gear shift solenoid S3	
TCM-0103 Gear shift solenoid S3	
TCM-0107 Gear shift solenoid S4	
TCM-0108 Gear shift solenoid S4	
TCM-0109 Gear shift solenoid S4	
TCM-010A Gear shift solenoid S5	
TCM-010B Gear shift solenoid S5	
TCM-010C Gear shift solenoid S5	
TCM-010D Lock-up solenoid SLU	
TCM-010F Lock-up solenoid SLU	
TCM-0110 Lock-up solenoid SLU	
TCM-0112 Line pressure solenoid SLS	
TCM-0113 Line pressure solenoid SLS	
TCM-0114 Line pressure solenoid SLS	
TCM-0115 Gear shift solenoid S3	
TCM-0116 Throttle solenoid SLT	
TCM-0117 Linear pressure solenoid SLT	
TCM-0117 Throttle solenoid SLT	
TCM-0118 Throttle solenoid SLT	
TCM-0120 Control module	
TCM-0121 Control module	
TCM-0122 Control module	
TCM-0122 Linear pressure solenoid SLS	
TCM-0123 Control module	
TCM-0123 Lock-up solenoid SLU	
TCM-0124 Control module	
TCM-0124 Linear pressure solenoid SLT	
TCM-012A Neutral check	
TCM-012B Neutral check	

## UEM

UEM-0004 Siren

UEM-0005 Sun roof	UEM-0092 Rear view mirror, display
UEM-0007 Reading lamp	UEM-0093 Seat belt reminder
UEM-0008 Reading lamp	UEM-0094 Seat belt reminder
UEM-0009 Reading lamp	UEM-00A0 Tire pressure sensor
UEM-000A Movement sensor	UEM-00A1 Tire pressure sensor
UEM-000B Movement sensor	UEM-00A2 Tire pressure sensor
UEM-000C Mass movement sensor	UEM-00A3 Tire pressure sensor
UEM-0011 Mass movement sensor	UEM-00A4 Tire pressure sensor
UEM-0013 Movement sensor	UEM-00A5 Tire pressure sensor
UEM-0014 Movement sensor	UEM-00A6 Tire pressure sensor
UEM-001C General courtesy lighting	UEM-00A7 Tire pressure sensor
UEM-001D Reading lamp	UEM-00A8 Tire pressure warning
UEM-001E Reading lamp	UEM-00A9 Control module
UEM-001F Remote receiver	UEM-E001 Control module communication
UEM-0020 Rear view mirror	UEM-E003 Configuration fault
UEM-0030 Reading lamp	
UEM-0031 Reading lamp	
UEM-0032 Reading lamp	
UEM-0033 Reading lamp	
UEM-0034 Reading lamp	
UEM-0035 Reading lamp	
UEM-0036 Reading lamp	
UEM-0037 Reading lamp	
UEM-0038 General courtesy lighting	
UEM-0039 General courtesy lighting	
UEM-003A Extended X supply [EXT_X]	
UEM-003C Cargo compartment lighting/3rd row reading lamps	
UEM-003D Cargo compartment lighting/3rd row reading lamps	
UEM-0041 Control unit	
UEM-0051 Sunroof	
UEM-0052 Sunroof motor	
UEM-0053 Sunroof motor	
UEM-0054 Sunroof motor	
UEM-0056 Sunroof motor	
UEM-0057 Sunroof motor	
UEM-0058 Sunroof motor	
UEM-0059 Sunroof motor	
UEM-0060 Sunroof motor	
UEM-0061 Sunroof motor	
UEM-0062 Sunroof motor	
UEM-0063 Sunroof motor	
UEM-0064 Sunroof	
UEM-0065 Sunroof	
UEM-0066 Sunroof	
UEM-0067 Sunroof	
UEM-0068 Sunroof	
UEM-0070 Sunroof	
UEM-0071 Control unit	
UEM-0072 Control unit	
UEM-0078 Siren	
UEM-0080 Rain sensor	
UEM-0081 Rain sensor	
UEM-0082 Rain sensor	
UEM-0083 Rain sensor	
UEM-0084 Rain sensor	
UEM-0090 PAD lamp	
UEM-0090 Rear view mirror, display	
UEM-0091 PAD lamp	
UEM-0091 Rear view mirror, display	

[www.ppc-diagnostic.com](http://www.ppc-diagnostic.com)